

# Basic Manual



**W64S**  
by Sony Ericsson

CDMA 1X  
**WIN**

**au** by KDDI

Contents/  
Before use

Phone call

Text input

Phone book  
Pair Function

Mail

Camera

EZweb

EZ Navi

au Media Tuner

Troubleshooting/  
Remote Ctrl Lock

Other features/  
Index

# Welcome

Thank you for purchasing a W64S.

Before using your W64S, read this W64S Basic Manual (PDF manual) to ensure correct use of your W64S. After you have finished reading this manual, save this PDF manual on your PC or recordable media, and store the printed manuals in a safe place so you can retrieve them whenever they are needed.

If you lose any of these manuals, contact an au shop or au Customer Service Center.

## Printed manuals for W64S (Japanese)

The W64S comes with the "W64S かんたんマニュアル" and the "W64S 取扱説明書."

"W64S かんたんマニュアル"



Equivalent to this PDF manual.

"W64S 取扱説明書"




English version is not available.

The following manuals are also available from the au homepage:

- The downloadable "W64S *かんたんマニュアル*" and "W64S 取扱説明書"  
(<http://www.au.kddi.com/torisetsu/index.html>)
- The au online manual (Japanese) for searching by keyword  
(<http://www.au.kddi.com/manual/index.html>)

 
The au online manual (Japanese) is also available from the EZweb:

<To access>

⑤ (EZ)→ (EZweb)→"au one Top"→"auお客さまサポート" (au Customer Support)  
→"調べる"→"オンラインマニュアル"

If you have any trouble with your cellphone, please visit the "auお客さまサポート" (au Customer Support) "困ったときは/故障診断" web site and find out your problem before calling for professional repairs.

- From your W64S ⇒ **E** (EZ) ⇒ **Z** (EZweb) → "au one Top" → "auお客さまサポート" (au Customer Support) → "調べる" → "オンラインマニュアル" → "故障診断Q&A"
- From your PC ⇒ (<http://www.kddi.com/customer/service/au/trouble/kosho/index.html>)



The font, typeface, shape and color used in this manual may differ from those used on actual screen or may be omitted.

# Etiquette

## Cellphone etiquette

- Cellphones always emit weak signals while its power is on.
- Enjoy using your cellphone safely without disturbing those around you.

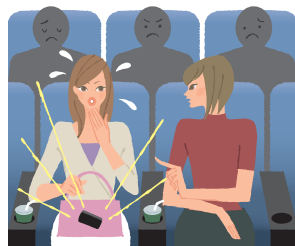
### ■ ■ Some places forbid the use of cellphones.

- Do not use your cellphone while you are driving. Doing so is dangerous and against the law.
- The use of a cellphone on aircraft is against the law. Be sure to turn your cellphone off before you board an aircraft.



### ■ ■ Consider where to use your cellphone and be careful of how loud you are speaking.

- Do not make calls while in cinemas, theaters, museums, libraries or other similar places. Turn your cellphone off or set it to the manner mode to prevent others around you from being disturbed by the ringtone.
- Use your cellphone in places where you are not blocking traffic from passing.
- Move to areas where you do not disturb others on trains or in hotel lobbies.
- Take care not to speak too loudly during conversations.
- Ask for other people's permission before taking their photos with your cellphone's camera.



### ■ ■ Signals from cellphones may adversely effect medical apparatus and equipment.

- Some people close to you in busy places such as crowded trains may have a pacemaker. Turn your cellphone off in such places.
- Abide by the rules of hospitals and other medical institutions where it is forbidden to use or possess cellphones.



# Basics of the cellphone

## What W64S offers

### International Roaming

You can use your W64S overseas as well as in Japan (supports GSM area).



Page  
**26**

### Mail

You can send mails to other cellphones or PCs.



Page  
**50**

### Camera

You can take photos or record movies and send them by e-mail easily.



Page  
**64**

### EZweb

You can download Chaku-Uta®(ringtones), Chaku-Uta-Full®(full songs) or wallpapers.



Page  
**70**



## EZ Navi

W64S supports "EZ Navi Walk," "Passenger Seat Navi," "Evacuate Navi" and "Security Navi" functions to confirm various location information.



Page  
**78**

## LISMO

W64S can be used as a portable music player.

## au Media Tuner

You can enjoy Television (1Seg), EZ Channel-Plus and EZ Channel.



Page  
**80**

## EZ FeliCa

You can use W64S as electronic money for shopping, member's cards, point cards, or to get e-coupon information as well.



## Custom Menu

You can customize your own menu by setting frequently used functions.

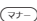


For details on other useful features, see page 88.

# Manner mode and record message

## Manner mode

You can use the manner mode to turn ringtones and other tones off to prevent others from being disturbed.


Hold down  for at least one second in the idle screen.



Page  
31

## Record message

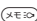You can record messages from other parties using answering message when you are unable to answer the call.

Hold down  for at least one second in the idle screen.



Page  
34

# Check the power, the signal, and the battery!

## Usually, keep the cellphone's "power" on.

To make or receive calls, turn the power on.


Hold down  for at least one second.



Page  
16

## You cannot connect where you are not able to get a "signal."

It is sometimes difficult to get a signal in places even within the service area.

 indicates the reception strength.



Page  
16

## Pay attention to the remaining "battery" power.

The cellphone may not function properly if the remaining battery power is low.

 indicates the remaining battery power.



Page  
16

## Do not use the cellphone while driving

Do not use the cellphone while driving a car/motorcycle/bicycle. It may cause a traffic accident. Use of the cellphone while driving a car/motorcycle is forbidden by the law. Use of the cellphone while driving a bicycle may be punished by the law too.



✗ Glancing at the screen to see mail






✗ Holding the cellphone to talk

## Use drive mode or turn the power off while driving

### Drive mode

When the drive mode is set, the answering message saying "I am driving right now. Please leave your name and message after the beep." plays in Japanese and the caller's message can be recorded.

Press  in the idle screen, and use  and  to select "Drive."



# Watch out for spam and one-ring call!

## ■ If you get incoming spam...

You can use the mail filter function to block the mail you specify/spoof e-mail.

The following are the main mail filter functions available for preventing spam:

- Reject e-mails marked with "未承諾広告※."
- Reject specified e-mails.
- Reject spoof e-mail.




Page  
**59**

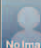





## ■ If you have an incoming call from an unknown number...

Such calls may be a scam to get you to return a call to the service with very high charges. This is called a "one-ring call."



The icon  will appear in the Received calls when you receive a one-ring call.

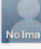Be careful when you return a call to a number you don't know.

Received		Dialed	
	9/25 11:06		
No Image	1 030001XXXX		
	9/25 10:00		
No Image	2 030004XXXX		
	9/25 9:00		
No Image	3 Carol Adam		
	9/24 22:00		
No Image	4 John Smith		
	9/24 17:05		
No Image	5 Ron Edward		

# Disaster Message Board Service

If a large scale disaster occurs, you can register your vital information through EZweb. The registered vital information can be viewed from anywhere in Japan through EZweb or the Internet.

## Registering the vital information

- ◆ If a large scale disaster occurs, you can use your au cellphone to register your vital information such as your condition or comments to the "Disaster Message Board" created on EZweb.
- ◆ After registering your vital information, you can notify it by e-mail to your preregistered family or acquaintances. They will be able to know that you posted your vital information on the "Disaster Message Board."

## Viewing the vital information





- ◆ You can view the vital information of a person you want to know by entering the phone number from EZweb or the Internet.<sup>※1</sup>  
<sup>※1</sup> You can view the vital information from other carriers' cellphones, PHS or PC by accessing <http://dengon.ezweb.ne.jp/>.



 

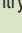



災害用伝言板  
伝言板トップ


～サービス提供中～  
安否情報の登録・確認が  
できます。

[登録\(登録可能地域は下  
記の「利用地域情報」を参  
照ください\)](#)  
[確認](#)  
[削除](#)  
[安否お知らせメール設定](#)  
[サービス概要](#)  
[ご利用地域情報](#)  
[被災地支援 義援金お付](#)  
[災害関連情報](#)  
「最新の災害情報」  
「災害時ナビ」など  
[災害対策への取り組み](#)  
[お問合せ](#)

[English](#)

To access	E (EZ)→press  to select  (EZweb)→use
	 and  to select "au one Top"→"災害用伝言板"
<a href="http://dengon.ezweb.ne.jp/">http://dengon.ezweb.ne.jp/</a>	

 -  The registered information is saved for up to 72 hours.
-  Up to 10 entries can be registered per phone number. When the number of entries exceeds 10, the oldest entry will be overwritten.
-  A demonstration for this service can be viewed from E (EZ) →press  to select  (EZweb)→use  and  to select "au one Top"→"auお客さまサポート" (au Customer Support) →"災害用伝言板(デモ版)".
-  You can use the English version by selecting "English."

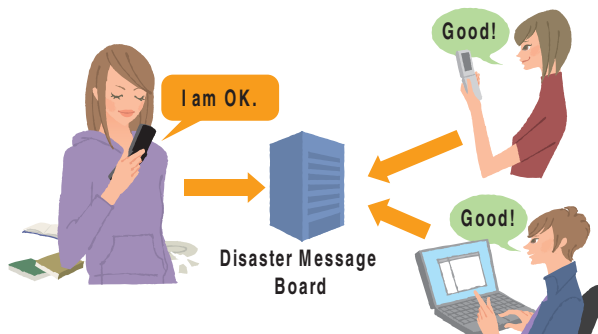

# Contents

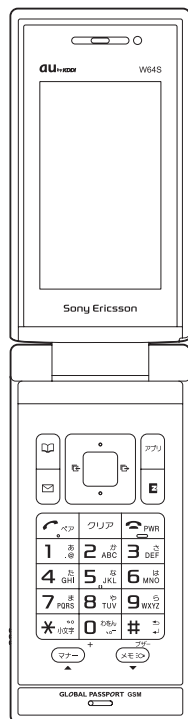
<b>Etiquette</b>	<b>1</b>
Cellphone etiquette .....	1
<b>Basics of the cellphone</b>	<b>2</b>
What W64S offers .....	2
Manner mode and record message .....	4
Check the power, the signal, and the battery! .....	4
Do not use the cellphone while driving .....	5
Use drive mode or turn the power off while driving .....	5
Watch out for spam and one-ring call! .....	6
Disaster Message Board Service .....	7
<b>Before use</b>	<b>10</b>
Checking the package .....	10
Names of parts .....	11
How to charge the battery .....	12
How to connect stereo earphone to W64S .....	13
How to use the keys .....	14
Turning the power on .....	16
Default settings .....	17
Before using English display .....	17
How to read the display .....	17
Displaying the menu .....	19
Styles of W64S .....	22
Initial settings for e-mail and EZweb .....	23
Confirming your cellphone number/e-mail address .....	23
Changing your e-mail address .....	24
Using W64S overseas .....	26
<b>Phone call</b>	<b>27</b>
Making a call .....	27
Making an international call .....	27
Receiving a call .....	29
Redialing the number (Dialed/Received) .....	30
Changing the volume during a call .....	30
Setting the manner mode .....	31
Changing the volume and tone of the ringtone .....	32
Setting the record message .....	34
Playing back recorded messages .....	35
<b>Text input</b>	<b>36</b>
Changing the input mode .....	36
Inputting text .....	37
<b>Phone book</b>	<b>42</b>
Saving to the phone book .....	42
Editing the phone book .....	44
Making a call from the phone book .....	46
Saving from Dialed/Received calls .....	47
<b>Pair Function</b>	<b>48</b>
Saving to the Pair Function .....	48
Making a call by using Pair Function .....	49

<b>Mail</b>	<b>50</b>
Using e-mail .....	50
Creating and sending e-mail .....	51
Opening a received e-mail .....	54
Searching e-mail .....	56
Replying to a received e-mail .....	57
Reading e-mails with photo or movie attached .....	58
Filtering spam .....	59
Using C-mail .....	60
Creating and sending C-mail .....	61
Opening a received C-mail .....	62
<b>Camera</b>	<b>64</b>
What you can do with the camera .....	64
Successful taking of photos .....	65
Taking photos .....	66
Viewing photos you have taken .....	68
Attaching a photo to e-mail .....	69
<b>EZweb</b>	<b>70</b>
About EZweb .....	70
Displaying the au one Top .....	70
Saving your favorite sites .....	72
Viewing a site saved to the Bookmark .....	72
Confirming your call costs .....	73
Downloading Chaku-Uta® (ringtones)/Chaku-Uta-Full® (full songs) .....	74
<b>EZ News Flash</b>	<b>76</b>
What you can do with EZ News Flash .....	76
Setting EZ News Flash service .....	77
<b>EZ Navi</b>	<b>78</b>
What you can do with EZ Navi .....	78
<b>au Media Tuner</b>	<b>80</b>
What you can do with au Media Tuner .....	80
Initial settings for au Media Tuner .....	82
Viewing Television (1Seg) .....	83
Viewing Television (1Seg) in Media style .....	84
Ending au Media Tuner .....	84
<b>Troubleshooting</b>	<b>85</b>
<b>Remote Ctrl Lock</b>	<b>86</b>
In case you have lost your W64S .....	86
<b>Other features</b>	<b>88</b>
Radio Wave Exposure and Specific Absorption Rate (SAR) Information .....	90
<b>Index</b>	<b>100</b>

# Before use


## Checking the package

### ◆ Main unit




### ◆ Battery pack

 ※ Overseas and Japan use




### ◆ USB cable (sample)

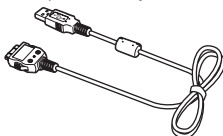※ Japan use only



### ◆ Sony Ericsson round-type earphone jack conversion adaptor 03

 ※ Overseas and Japan use



### ◆ "W64S かんたんマニュアル" (Japanese)



### ◆ Desktop holder

※ Overseas and Japan use



### ◆ CD-ROM



### ◆ Stereo earphone (sample)



### ◆ "W64S 取扱説明書" (Japanese)





### ◆ Warranty (Japanese)

### ◆ Safety Precautions (Japanese)

### ◆ Others (Japanese)

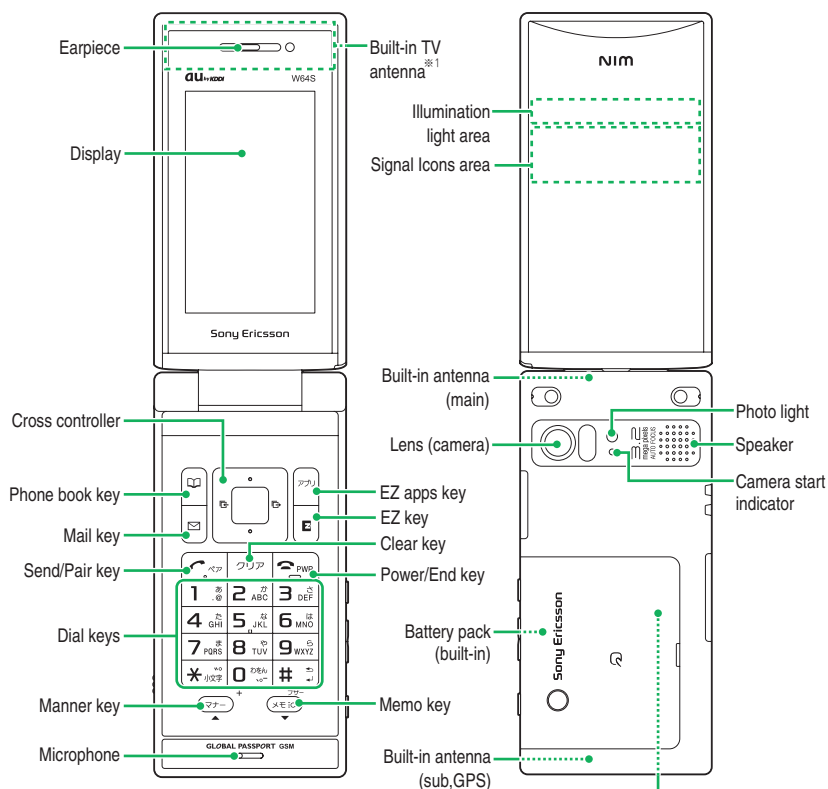
- GLOBAL Passport GSM Owner's Guide (Japanese)
- Osaifu-Keitai® Guide (Japanese)
- LISMO Installation Guide (Japanese)

 AC adaptor and microSD™ Memory Card are not included in this package. Please purchase standard AC adaptor 01/02 (optional) and microSD™ Memory Card (sold separately).



 Standard AC adaptor 01 (optional) is designed for use in Japan only. When charging your W64S overseas, please be sure to use standard AC adaptor 02 (optional).



# Names of parts



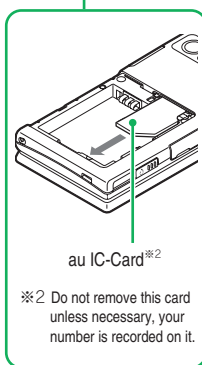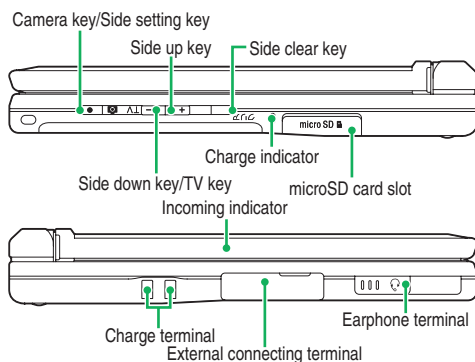※1 This part works as an antenna in Media style. When viewing Television (1Seg), to receive enough radio wave, do not cover with your hands.



# How to charge the battery

The battery pack is not fully charged at the time of purchase.

Before you use the W64S, charge the battery pack.

1

**Connect the standard AC adaptor 01/02 (optional) to the connecting terminal of the desktop holder.**



Carefully check the connector shape, and then connect it.



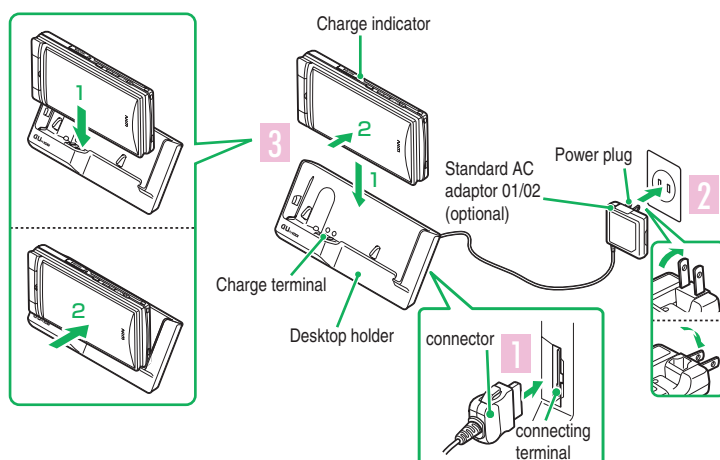
When charging your W64S overseas, please be sure to use standard AC adaptor 02 (optional).

2

**Fold out the power plug of the standard AC adaptor 01/02 (optional), and plug it into a 100 V AC power outlet.**

3

**Place W64S (closed, Battery pack attached) onto the desktop holder.**



## • Charging is in progress

Charge start tone sounds and the charge indicator lights up in red.

appears.

## • Charging is finished

Charge completed tone sounds and the charge indicator light turns off.



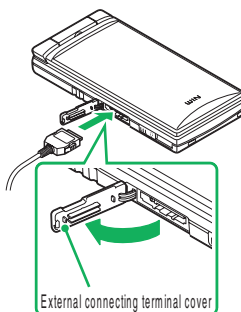
When the battery is fully charged, pull out W64S upwards.

## ❏ Charging by directly connecting the standard AC adaptor 01/02 (optional)

You can also charge the battery pack by directly connecting the standard AC adaptor 01/02 (optional) to the W64S.



Carefully check the connector shape, and then connect it.




## How to connect stereo earphone to W64S

1

Connect the stereo earphone to the Sony Ericsson round-type earphone jack conversion adaptor 03.


2

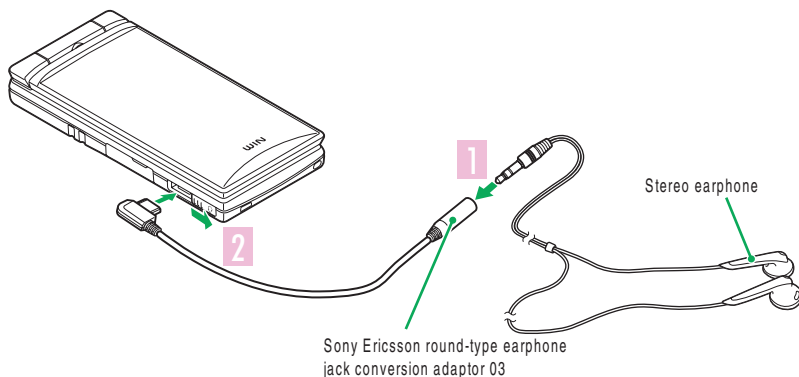
Slide the earphone terminal cover to open in the direction of the arrow, as shown below. Then insert the Sony Ericsson round-type earphone jack conversion adaptor 03 plug straight to the terminal.





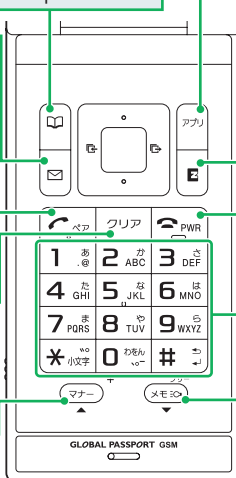Do not force to connect in the wrong direction. Otherwise, it may cause damage. Please connect in the direction as shown in the illustration above.


# How to use the keys





 : Open phone book  
**Hold down (1 second):** Save to the phone book


 : Open E-mail menu  
**Hold down (1 second):** Open C-mail menu


 : Make or receive a call  
Open pair function  
**Hold down (1 second):** Open the screen for Fake Incoming Call

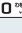

 : Cancel operation  
**When entering characters:** Delete characters


 : Open manner display  
**Hold down (1 second):** Set or cancel the manner mode


 : Open EZ apps(BREW®) menu


 : Open EZ Service menu


 : End a call or operation  
**Hold down (1 second):** Turn power on  
**Hold down (2 seconds):** Turn power off

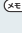
 ~  : Enter phone numbers/  
\* / # / characters / other symbols

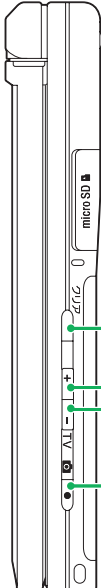
 : Open memo function  
**Hold down (1 second):** Set or cancel the record message




 : Cancel operation

 : Increase the volume when using au Media Tuner  
**Hold down (1 second):** When main unit closed, turns assist light on while holding down

 : Decrease the volume when using au Media Tuner  
**Hold down (1 second):** Start au Media Tuner

 : Shutter when using camera  
**Hold down (1 second):** When main unit opened, start camera  
When main unit closed, light illumination and signal icons

## How to use cross controller™

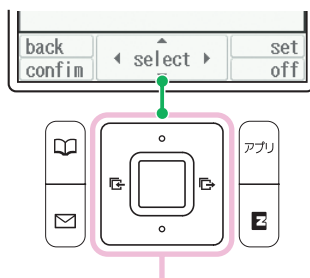


Display	Description in this manual	Operation	Explanation
			<b>Press up and down</b> Move the cursor up and down <b>Operations in the idle screen</b> <input type="checkbox"/> <b>Hold down (1 second):</b> Open schedule <input type="checkbox"/> <b>Hold down (1 second):</b> Open data folder (page 68)
			<b>Press left and right</b> Move the cursor left or right Display previous or next screen <b>Operations in the idle screen</b> <input type="checkbox"/> :Open Received calls (page 30) <input type="checkbox"/> :Open Dialed calls (page 30)
			<b>Press center (center key)</b> Select the item <b>Operations in the idle screen</b> Open Main menu <b>Hold down (1 second):</b> Set or cancel side keylock

## Soft keys

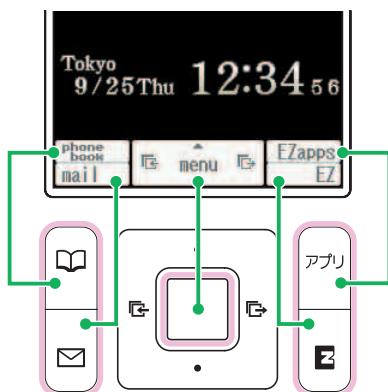Soft keys work according to the displayed indication as shown below.


The displayed indications and function of the keys will vary depending on the operation selected.



## Turning the power on

1

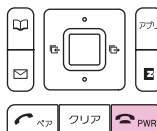
Hold down  for at least one second.








Retrieving card(UIM) info (user operation is disabled)


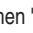
Check the remaining battery power.

			
Fully charged	Medium	Low	Fully discharged

- Charge the battery pack when the power is low.
-  appears during charging.

Check the reception strength.

				
Strong	Medium	Weak	Very weak	Out of service area

- You cannot receive or make calls when  (Out of service area) is displayed.
- You may not be able to receive or make calls when  (Very weak) is displayed.



## To turn the power off

Hold down  for at least two seconds.






## Default settings

The followings are set by default.

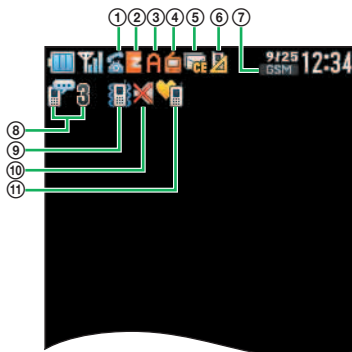
Chg Lock No. (Change Lock No.)	1234	Font size	General font : Large EZweb font : Middle E-mail font : Middle C-mail font : Large Input font : Large
Caller ID	ON		

## Before using English display

### ■ ■ To set English display

- ① Press  (メニュー) in the idle screen → press  .
- ② Press  to select "English," and press  (選択).

## How to read the display



Icon	Description
①	During a call
②	While you are using EZ Service menu/EZweb
③	While you are using EZ apps
④	While you are using au Media Tuner
⑤	When mail was received but not yet read
⑥	When you missed an incoming call
⑦	While Overseas (GSM) mode is set ·  appears when data communications is available.
⑧	While record message is set The number of recorded messages (1 to 5)
⑨	When the vibrator is set to "ON"
⑩	When the ring volume is set to "OFF"
⑪	While the manner mode is set

## Notification Icons

Notification Icons appear on screen when you have missed calls or unread mails, other function-related information to notify, etc. You can see that information using to move the cursor on the icon and press (select).







Icon	Description
①	When there is a missed call
②	When there is an unheard recorded message
③	When an e-mail was received
④	When there is an unreceived e-mail stored at the center
⑤	When a C-mail was received

To open Main menu from the screen with Notification Icons, press or to move the cursor away from the icon and press (menu).

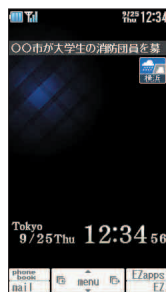


# Displaying the menu

W64S offers various settings/functions by using "Main menu" and "EZ Service menu" in Normal style/"Media Launcher" in Media style. For operation, use / in Normal style and / in Media style.


## ■ ■ Main menu

### In the idle screen







Press  (menu) to display the Main menu

### Select from the Main menu

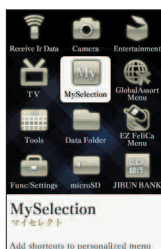


Press  to select an item

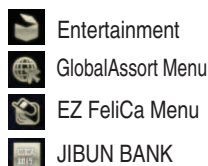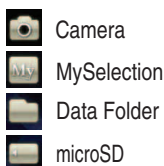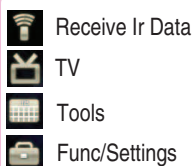

Press  (select) to select the item



 Continued on the next page

## ■ EZ Service menu

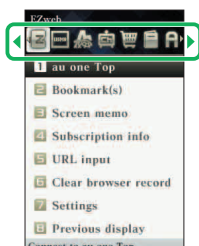
You can access the information sites on EZweb and use EZ Navi, EZ Channel-Plus/EZ Channel, etc.

### In the idle screen




Press **[EZ]** (EZ) to display the EZ Service menu

### Select from the EZ Service menu



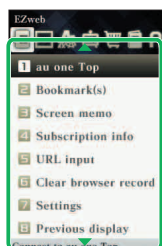Press **[Left/Right]** to select a category



Press **[Up/Down]** to select an item



EZweb



 
Shopping&Auctions



LISMO



EZ Book



EZnavi



EZapps




EZ Channel-plus

Press **[Select]** (select) to select the item



## Media Launcher

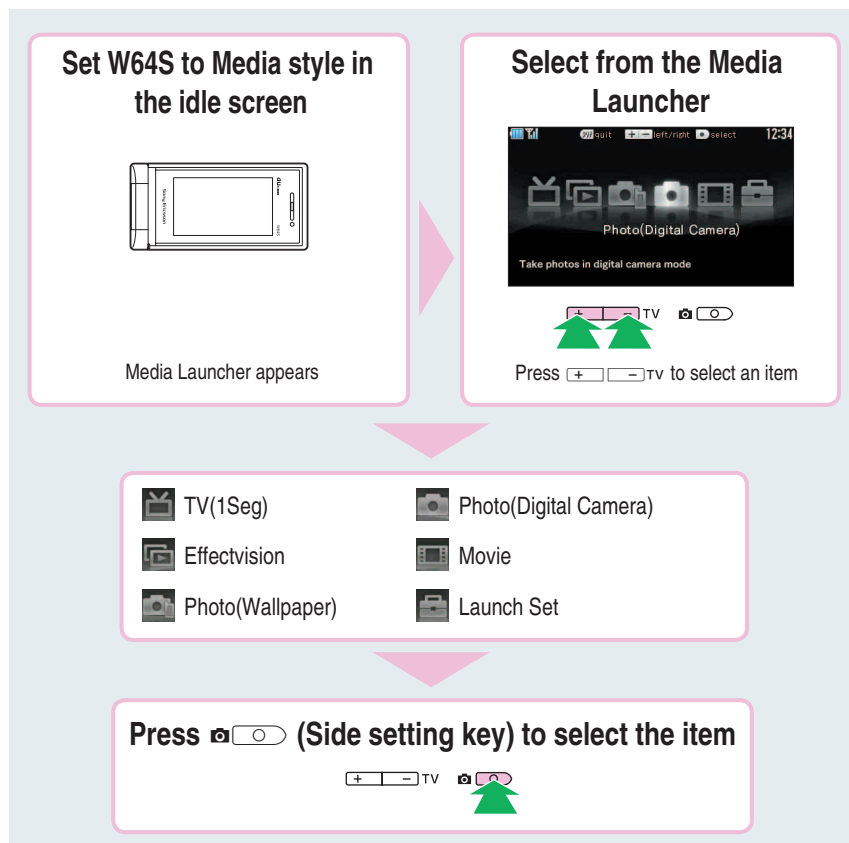Media Launcher is a menu for Media style, which enables you to start the multimedia functions of W64S such as viewing Television (1Seg) and taking photo/movies easily. The default setting of "Launch Set" is set to "Media Launcher," so when you set W64S to Media style in the idle screen, Media Launcher appears.




- If "Launch Set" is set to something other than "Media Launcher," Media Launcher appears by pressing [Side setting key] in Media style while the idle screen is displayed.
- The default menu screen design depends on the color of the main unit.

# Styles of W64S

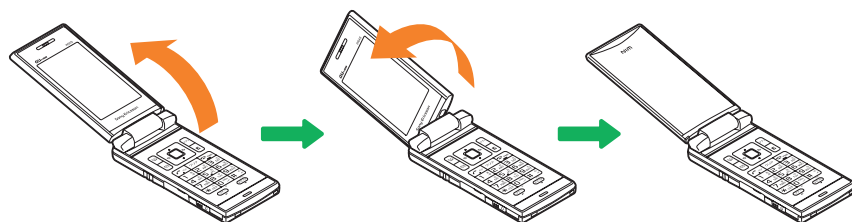You can use W64S in Normal style which the main unit is open with the display part facing inside, also in Media style and Recording oneself style.

## Setting to Media style and Recording oneself style


- ① Open the display part.
- ② Rotate the display part 180 degrees clockwise.



Do not use W64S in this condition.

### Media style

 
- ③ Close the display part.





You can enjoy Television (1Seg), Effectvision, and Camera functions.

### Recording oneself style

 - ③ Point the lens to yourself.






This is a style useful when taking a picture of yourself.


-  Rotate the display part to the direction shown in the illustration. Forcing to rotate the display may cause damage or malfunction.
-  In this manual, the operation step explanations are described in Normal style which the main unit is open with the display part facing inside.

# Initial settings for e-mail and EZweb

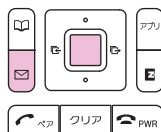If you subscribed to the EZweb service, make the following initial settings.


1




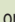


Press  (mail) in the idle screen,  
and press  (ok).  
Press  (OK).



だいたい初期設定を行って  
います。しばらくお待ち  
ください。(30秒-3分  
程度かかります)

Welcome to EZweb.  
Your e-mail address  
is:  
A@ezweb.ne.jp

 Without EZ News Flash settings, EZ News Flash setting screen appears.



-  Initial settings cannot be made from overseas.
-  You can also initialize the settings by pressing  (EZ) or  (EZapps), or holding down  (TV key) for at least one second.
-  Your e-mail address is automatically determined when you initialize the settings.

## If you have not subscribed to EZweb service yet

Contact an au shop or au Customer Service Center. You need to subscribe to the EZweb service to use e-mail, EZweb or other EZ services.

# Confirming your cellphone number/e-mail address






1

Press  (menu) in the idle  
screen, and press .

You can confirm your cellphone number and  
e-mail address.




Basic Detail  
Phone no.  
0900001XXXX  
My address  
A@ezweb.ne.jp  
ICCID  
1234XXXXXXXXXXXXXXXX

-  You can also confirm your cellphone number and e-mail address by pressing  (menu) in the idle screen, and use  and  and  to select "Func/Settings" → "Profile."

# Changing your e-mail address




e-mail address

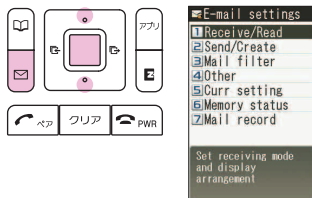
Example : @ezweb.ne.jp

Changeable part      Domain





Before use


1

Press  (mail) in the idle screen.  
Press  to select "Settings,"  
and press  (select).





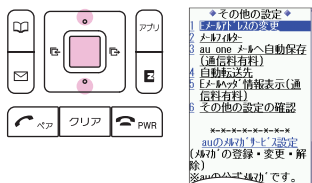
2

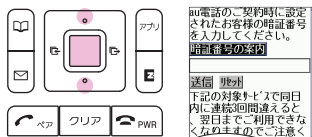Press  to select "Other," and  
press  (select).  
Press  to select "Yes," and  
press  (select).






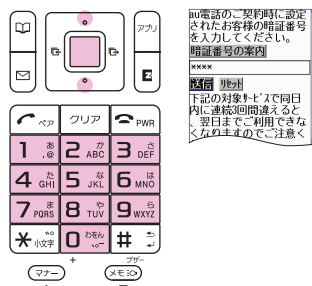
3

Press  to select "Eメール  
アドレスの変更," and press  
 (Select).



4

Press  to select the input field,  
and press  (Edit).  
Enter your security code, and  
press  (ok).





Security code is the 4-digit number that you wrote in the application form when subscribing.

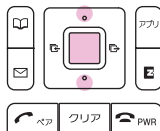


Note that no setting operation is allowed until the following day if you enter the wrong security code three times a day.

5

Press  to select "送信," and press  (Select).

Press  to select "承諾する," and press  (Select).





Eメールアドレスを変更します。  
ご希望のEメールアドレスを入力してください。

※Eメールの注意※  
記号は「.」「\_」「-」のみ  
使用可能です。「!」は最初  
には利用できません。  
最初に数字の「0」を使用  
することはできません。

beezweb.ne.jp

送信 送信

6

Press  to select the input field, and press  (Edit).

Enter the text before @, and press

 (ok).



Eメールアドレスを変更します。  
ご希望のEメールアドレスを入力してください。

※Eメールの注意※  
記号は「.」「\_」「-」のみ  
使用可能です。「!」は最初  
には利用できません。  
最初に数字の「0」を使用  
することはできません。

AAA

beezweb.ne.jp



送信 送信

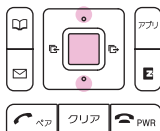
前のページへ



For details on how to input e-mail addresses, see page 37.

7

Press  to select "送信," and press  (Select).



新しいEメールアドレスは

aaa@beezweb.ne.jp



です。  
よろしいですか？


OK キャンセル

**When the e-mail address cannot be changed**

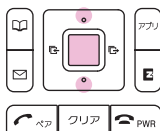The e-mail address that you entered is already used. Enter a different e-mail address.

8

Press  to select "OK," and press  (Select).



Update is complete.



For details on how to confirm your e-mail address, see page 23.


# Using W64S overseas

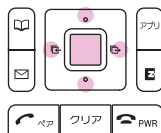You can use your W64S overseas just by changing the Area Setting to "Overseas (GSM)".



1



Press  (menu) in the idle screen.

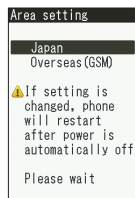
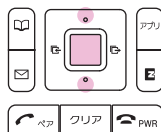
Press  to select "GlobalAssort Menu," and press  (select).



2

Press  to select "Overseas Settings," and press  (select).



Press  to select "Area Setting," and press  (select).



3

Press  to select "Overseas (GSM)," and press  (select).

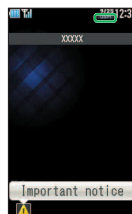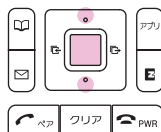W64S will restart after the power is automatically off, then **GSM** and "Important notice" appears in the idle screen.




Change Area Setting after finishing currently running functions.



## Phone call

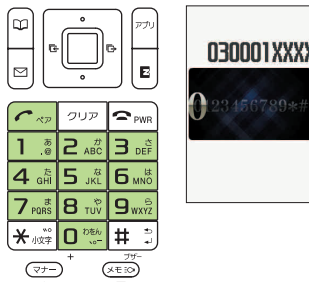
## Making a call

Press **0** かほろ to **9** は to enter the other party's phone number, and press **☎** てつ.



Enter "184" before the cellphone number of the other party.

 
↑ International access code    ↑ Area code    ↑ Phone number  
                                ↑ Country code (USA)

 For charges, please refer to au MOBILE PHONE SERVICE GUIDE or au Customer Service Center.


27




## 001 KOKUSAI MOBILE TALK

 Application required. For inquiries, please contact the KDDI Customer Service Center.






 **0077-7160** (toll-free; open 9:00 to 20:00 on everyday including weekends and national holiday)

Example: To call 212-123-△△△△ in the USA





-  Charges for 001 KOKUSAI MOBILE TALK are charged separately from monthly au telephone charges.
-  Please check the Country code at the au Customer Service Center.
-  For charges, please refer to au MOBILE PHONE SERVICE GUIDE or au Customer Service Center.


## Making an international call from overseas

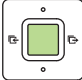
- ① See steps 1 to 3 in "Using W64S overseas" (page 26) to set the Area Setting to "Overseas (GSM)."
- ② Press  to  to enter the other party's phone number, and press  (call).
- ③ Press  to select how to call, and press  (select).
  - "Call" : Make a call
  - "Dial to Japan (+81)": Automatically delete the first "0" of the entered phone number and attach "+" (international code) and "81" (Japan country code); then make a call
  - "Int'l call (+)" : Automatically attach "+" (international code) before the phone number and call


# Receiving a call


1


Press  or  (call) to answer the call.

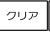


















Duration

4



Hung up if you twist display or close phone




When you have finished the call, press .


## The display when you receive a call

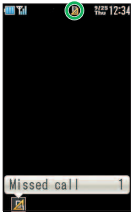Phone number	When the other party has set to notify Caller ID ※ If the other party's name and phone number are already saved in the phone book, that person's name is also displayed
"ID Unsent"	When the other party has set not to notify Caller ID
"Payphone"	When you have received a call from a payphone
"Not support"	When you have received a call from a party that is not able to notify Caller ID

## The display if you are unable to answer a call

If you are unable to answer a call, you are notified that you had a call on the display.

If you press  (select), you can confirm the phone number of the other party that called you and redial that party.




## Redialing the number (Dialed/Received)

1

Press  in the idle screen.

 : Display Received calls.

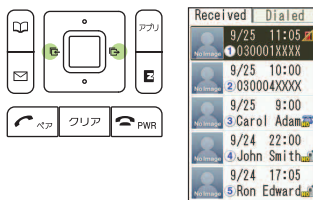 : Display Dialed calls.




### Icons of Received calls

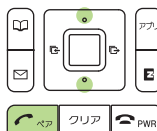
: The call that you did not answer (missed call)

: The call within three seconds of incoming time (one-ring call)

: The message stored at the Voice Mail center

2

Press  to select the phone number you want to call, and press



The call is connected to the phone number you selected.





In each memory, the phone numbers of last 30 calls can be saved.


## Changing the volume during a call

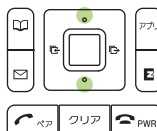1

Press  during a call.

: The volume increases  
(Level 1 to 5).





: The volume decreases  
(Level 5 to 1).




## Setting the manner mode

The W64S vibrates to notify you of incoming calls.

**Hold down  for at least one second in the idle screen.**

The manner mode is set, and    
and   appear in the display.

At the same time, record message is set, and  appears in the display.



### To cancel the manner mode

Hold down  for at least one second in the idle screen.






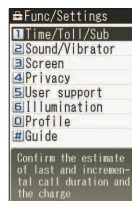
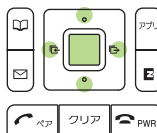
There are four types of manner settings: "Manner," "Silent," "Drive" and "Original."

# Changing the volume and tone of the ringtone



Example: When setting a "Preset" ringtone

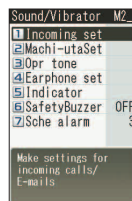
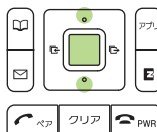
1

Press  (menu) in the idle screen.  
Press  to select  
"Func/Settings," and  
press  (select).







2

Press  to select  
"Sound/Vibrator," and  
press  (select).





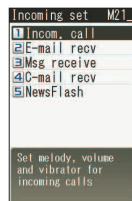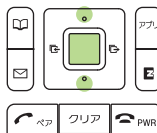
3

Press  to select  
"Incoming set," and  
press  (select).





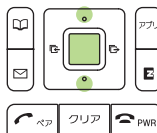
4

Press  to select  
"Incom. call," and  
press  (select).



5

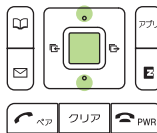Press  to select "Volume," and  
press  (select).



6

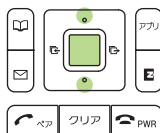
Press  to adjust the volume, and press  (ok).



"OFF" :The ringtone does not sound.

"1" to "5" :The ringtone sounds at the level you set.



"Step down" :The volume of the ringtone decreases.

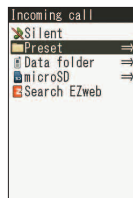
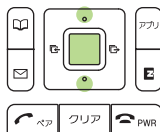
"Step up" :The volume of the ringtone increases.



 "Step down" and "Step up" can be selected by pressing  over "5."



7


Press  to select "Melody," and press  (select).






 "Feel Comfort" is set by default.

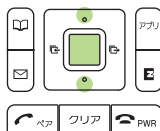8



Press  to select "Preset," and press  (select).

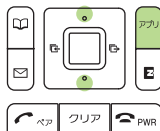


 If you press  (play), the ringtone you selected plays back.

If you press  (■) while the ringtone is being played, W64S stops playing.

9


Press  to select a ringtone, and press  (save).






# Setting the record message

1

Hold down  for at least one second in the idle screen.





Record message is set, and  appears in the display.



-  You can also use the record message to record a message from the other party by pressing  (memo) while receiving a call.
-  You can record up to five messages within 60 seconds in Japan mode and 20 seconds in Overseas (GSM) mode.

## To cancel record message


Hold down  for at least one second in the idle screen.

-  If the record message still contains any message,  remains in the display even after canceling record message.  disappears when record message data is deleted.
-  When you turn the power off or when you are in a place where the signal is weak, use Answering Service (Voice Mail).



# Playing back recorded messages

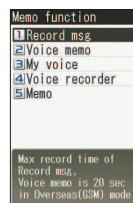
## When a message is recorded

A message and  1 (number of recorded messages) appear in the idle screen.




1

Press  in the idle screen.





2

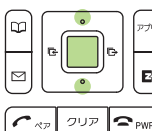Press  to select "Record msg," and press  (select).







3

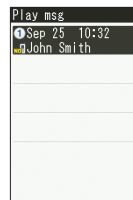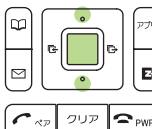
Press  to select "Play msg," and press  (select).



4

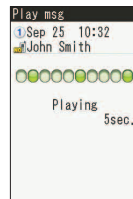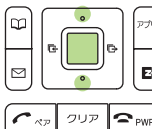Press  to select the recorded message to play back, and press  (play).



You can delete recorded messages by pressing  (delete) while the recorded message is playing back.

# Text input

## Changing the input mode


Input text by changing the input modes below.

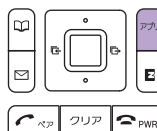



Input mode


漢	: Kanji/Hiragana mode
かな/カ	: Kana mode (single/double byte)
aA/A	: English mode (single/double byte)
12/1	: Number mode (single/double byte)

1

Press  (mode) in the text input screen.



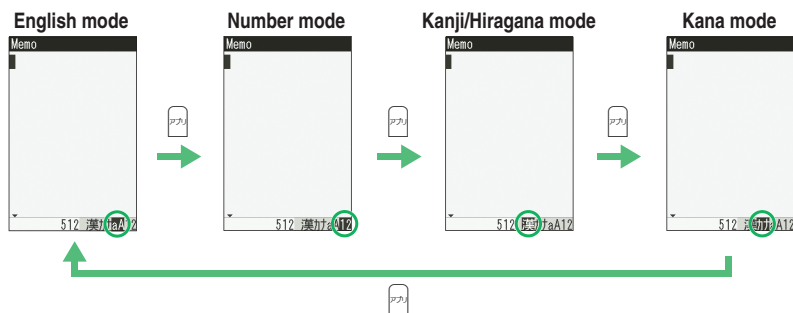Each time you press , the input mode changes in following order:  
English → Number → Kanji/Hiragana → Kana → English...










The input mode that you can select is different depending on the current input screen.









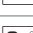

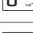

# Inputting text


## To input alphanumerics

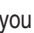
In the text input screen, press the keys as described in the table below.




Example:  →  →  →  →  →  →   
           a       b       c       A       B       C       2  
           └────────────────────────────────┘

### ◆ Character key assignment table (single byte alphanumerics)

Key	Number of times to press the key								
	1	2	3	4	5	6	7	8	9
	.	@	-	_	/	:	~	1	
	a	b	c	A	B	C	2		
	d	e	f	D	E	F	3		
	g	h	i	G	H	I	4		
	j	k	l	J	K	L	5		
	m	n	o	M	N	O	6		
	p	q	r	s	P	Q	R	S	7
	t	u	v	T	U	V	8		
	w	x	y	z	W	X	Y	Z	9
	Space	0	!"#\$%&'()	*+,-./:;<=>?@	[ \ ] ^ _ ` {   } ~				
	.	,	-	!	?				
	Break lines Back space function when entering characters※2								

※1  is also used to switch between uppercase and lowercase of current displayed characters.

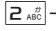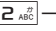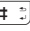※2 When you enter the characters by pressing keys,  is used to reverse the order of characters to be appeared (Back Space function).

Example:  →  →   
           a       b       →   a



Depending on the current input screen or the inputted character right before, the input mode changes in order of uppercase → lowercase.



You can input your e-mail address using up to 30 single bytes alphanumeric in lowercase including "-" (hyphen), "." (dot), and "\_" (underscore). Note, however, "." (dot) and "0" cannot be used at the beginning of your e-mail address. Characters and symbols with blue background in the above table cannot be used before @ of "△△△△@ezweb.ne.jp."

Example: To input "Autumn of 2008" in the mail subject

1

## Input "Autumn" in the text input screen.

A : Press **2** カ ABC once.

u : Press **8** ウ TUV twice and  once.

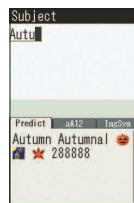
t : Press **8** ウ TUV once and  once.

u : Press **8** ウ TUV twice.

m : Press **6** ハ MNO once and  once.

n : Press **6** ハ MNO twice.

Prediction candidate appears. You do not have to enter "Autumn" entirely if the word you want to enter appears in the Prediction candidate.





2

## Press , Press to select "Autumn," and press (select).

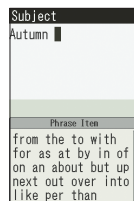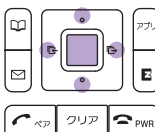"Autumn (space)" is entered, and Phrase Item appears.



 A space is automatically entered after a word.



3


## Press , Press to select "of" from the Phrase Item, and press (select).

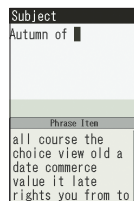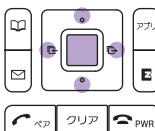You can also input "of" by pressing **6** ハ MNO three times and **3** エ DEF three times.



4

## Press (mode) and switch to Number mode.

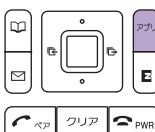


Enter "2008," and press  (ok).

2: Press  once.

0: Press  once.

0: Press  once.

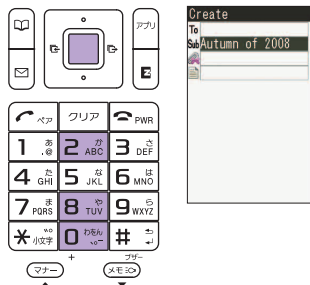8: Press  once.




## To consecutively input characters assigned to the same key

Input the first character, press  and press the next character key.


After inputting the first character, no operation for about four seconds automatically moves entering position.

Example: To input "Ab"

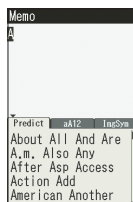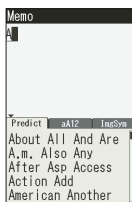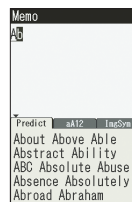
Press  once.




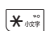
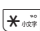
Press .



Press  twice.



## To input uppercase characters

Example:  →  →   
 a → A → a

## To delete characters


Example: Press  once.

abcd → abcd

Hold down  for at least one second.

abcd → 



(All characters are deleted.)

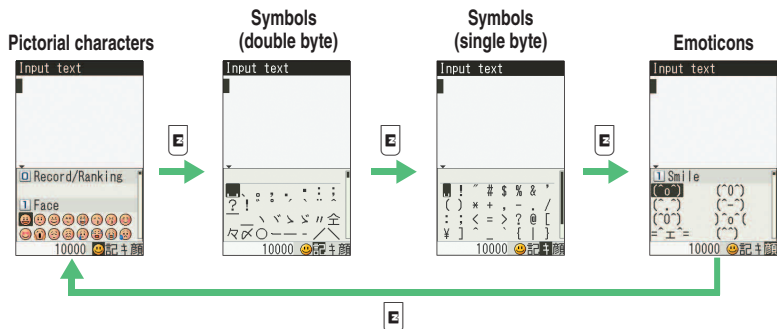
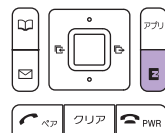
 Continued on the next page



## To input pictorial characters, symbols and emoticons

1



Press  (/sym) in the text input screen.

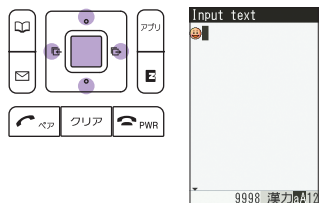
Each time you press  (/sym), the character group changes in following order: Pictorial characters→Symbols (double byte)→Symbols (single byte)→Emoticons→Pictorial characters...




 You can switch categories of pictorial characters or emoticons by pressing  (category) on each selection screen.

2

Press  to select the character group you want to use, and press  (select).



 The character group that you can select is different depending on the current input screen.



## To input useful sentences

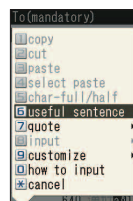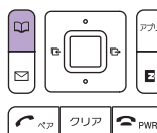You can enter your frequently used sentences using our useful sentence list.



Example: To input "@ezweb.ne.jp" in the mail address



1

Press  (option) in the text input screen.




2

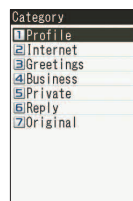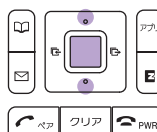Press  to select "useful sentence," and press  (select).




3

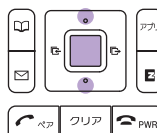Press  to select "Internet," and press  (select).



4

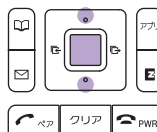Press  to select "@ezweb.ne.jp," and press  (select).




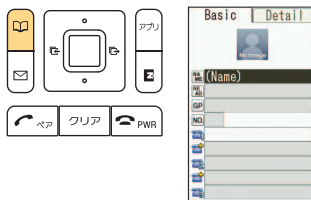
# Phone book

You can save up to 1,000 phone numbers or e-mail addresses.

## Saving to the phone book


1

Hold down  (phone book) for at least one second in the idle screen.



2

Press  to select

 (Name), and press

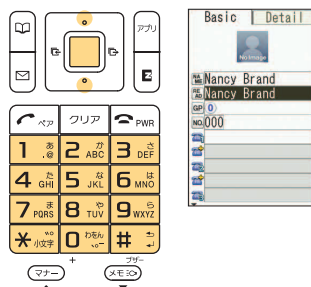
 (select).

Enter the name, and press

 (ok).

 (JP reading) is automatically entered.

 For details on how to enter text, see page 36.




3

Press  to select

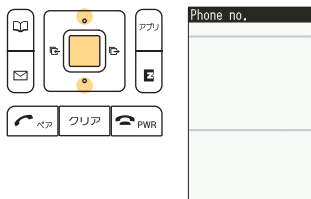
 (Phone no.1), and press



 (select).



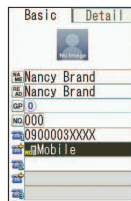


4

Enter the phone number, and press  (ok).

" Mobile" is automatically entered to  (phone type).

You can select from seven phone types.






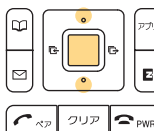
When saving a regular phone number, start with the area code.




To end saving to the phone book, jump to step 7.



5

Press  to select  (Mail address1), and press  (select).

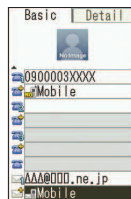


6

Enter the e-mail address, and press  (ok).

" Mobile" is automatically entered to  (e-mail address type).


You can select from six e-mail address types.



For details on how to enter e-mail addresses, see page 37.

7

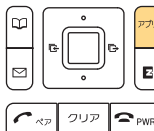Press  (cmplt).



The entry is automatically saved to the smallest available memory number from 000 to 999.




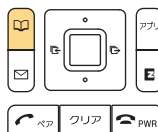
You can also save other items such as groups, ringtones, postal addresses and birthdays.

# Editing the phone book

Example: To edit phone numbers

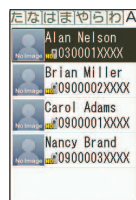
1

Press  (phone book) in the idle screen.




To switch from the " あ " to "ETC" display lines

Press .





2

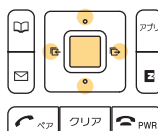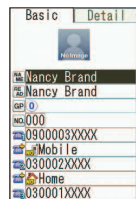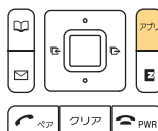Press  to select the entry to edit, and press  (select).






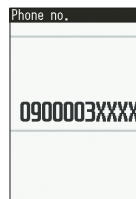
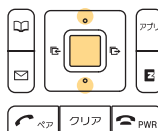
3

Press  (edit).



4

Press  to select the item you want to edit (in this case, , and press  (select).



5

Edit the information, and press

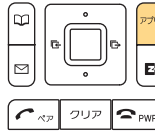


(ok).



6

Press (cmplt).




## Deleting the phone book

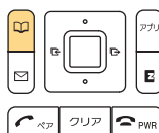
Example: To delete one entry

- ① Press (phone book) in the idle screen. Press to select the entry to delete, and press (select).
- ② Press (option). Press to select "delete," and press (select).
- ③ Press to select "Yes," and press (select).

# Making a call from the phone book



1

Press  (phone book) in the idle screen.





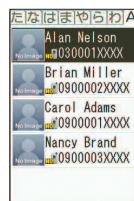
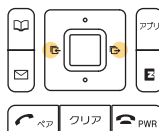
To switch from the " あ " to "ETC" display lines

Press .





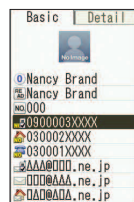
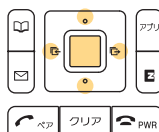
2

Press  to select the person to call, and press  (select).



3

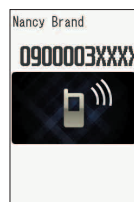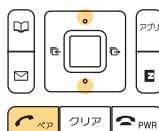Press  to select the phone number, and press .




# Saving from Dialed/Received calls

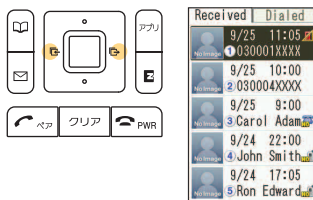1


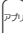
Press  in the idle screen.

 :Display Received calls.

 :Display Dialed calls.

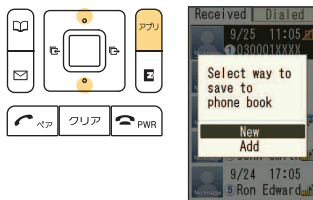


2



Press  to select the phone number to save in the phone book, and press  (save).

"New":Create and save a new address.

"Add":Add and save newly added information.

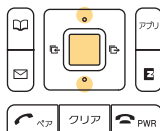



3

Press  to select "New," and press  (select).

The phone book edit screen appears.

The phone number you selected is automatically entered.



 For details on how to save information in the phone book, see steps 2 to 7 on pages 42 and 43.




# Pair Function

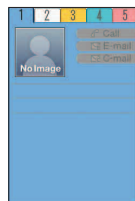
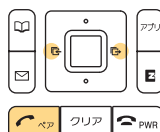
## Saving to the Pair Function

You can save up to five phone numbers (like frequently used ones) from the phone book, and make calls or send mails with a simple operation.

You need to save Pair Partners to the phone book beforehand. For details on how to save numbers in the phone book, see pages 42 and 43.

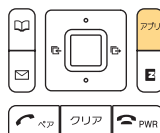
1

Press  in the idle screen, press   to display the tab you want to save a partner to.




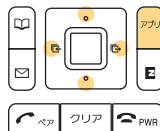
2

Press  (set).



3

Press  to select the person to save, and press  (save).



Name, Phone no., Mail address and image of the person you selected are saved.




Deleting Pair Partner's data from the phone book also cancel the Pair Function for those data.

# Making a call by using Pair Function

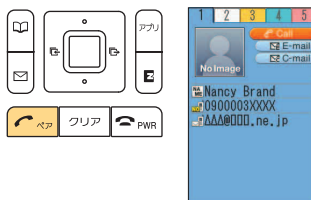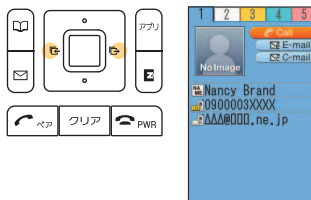
1

Press  in the idle screen.






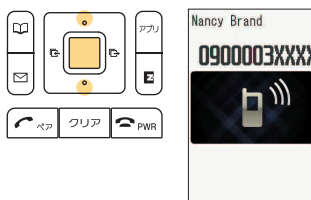
2

Press  to select the person to call.







3

Press  to select  (Call), and press  (select).



## To send mail

Press  to select  (E-mail) or  (C-mail), and press  (select) in step 3.

-  For details on how to create or send e-mail, see steps 7 to 11 on pages 52 and 53.
-  For details on how to create or send C-mail, see steps 3 to 4 on page 61.

# Mail

## Using e-mail

 EZweb subscription required

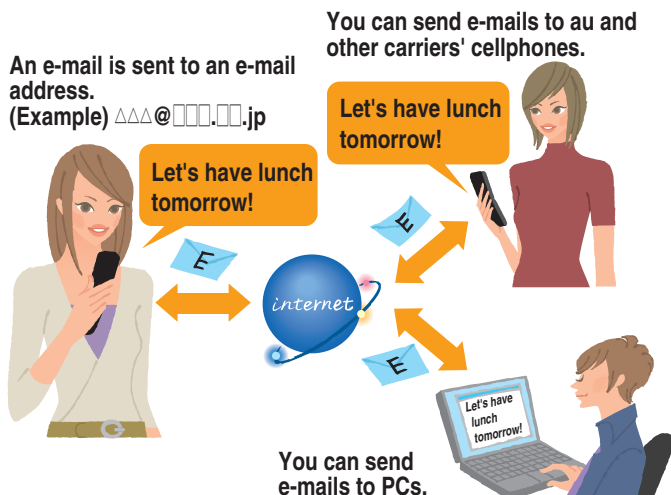
### About e-mail

E-mail allows you to exchange mail with PCs or cellphones that supports e-mail. You can send mail comprising up to 5,000 double/10,000 single byte characters, also photos and movies.

### Before using e-mail

- You need to subscribe to the EZweb service to use the e-mail service. Contact an au shop or au Customer Service Center if you did not subscribe to the service at the time of purchase.
- Make initial settings before using the e-mail and EZweb services. See page 23 to make initial settings.
- You can send e-mail to up to 30 recipients<sup>※1</sup> at a time.
- You can send up to 1,000 e-mails (counted by recipients of messages) in one day.
- It may take a short while to send/receive mails when they have attachments.

※1 When address number restrict is set to "on," you can send e-mail to up to 5 recipients (Includes To/Cc/Bcc, within 640 single-byte characters).




Data communications fee (varied by the data amount) is charged when sending/receiving e-mail.



# Creating and sending e-mail

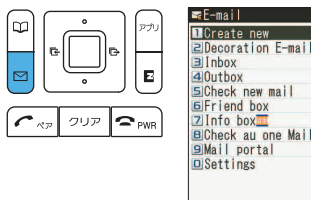
1

Press  (mail) in the idle screen.



2

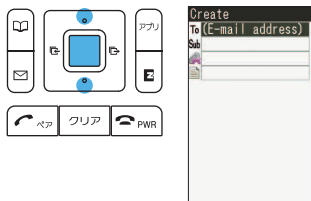Press  to select "Create new," and press  (select).



## Icons



**To** (E-mail address): The e-mail address of the recipient

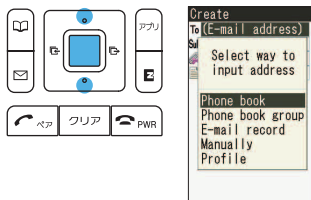
**Sub** (Subject) : The subject of the e-mail


 (Attached data) : The data attached to e-mail


 (Text) : The main text of the e-mail

3



Press  to select **To** (E-mail address), and press  (select).

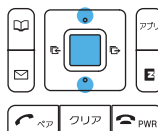


 There are three types of destinations: To, Cc and Bcc. You can send e-mail to several destinations at a time.

 Continued on the next page



4



Press  to select "Phone book," and press  (select).





You can also select an address from sent/received record or enter an address manually.

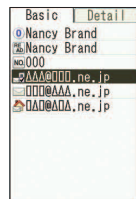
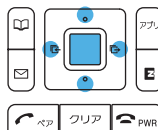
5

Press  to select a person you want to send an e-mail to, and press  (select).





6

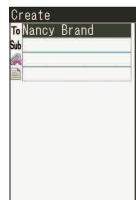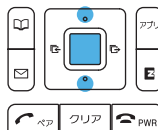Press  to select an e-mail address, and press  (select).




7

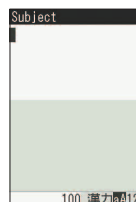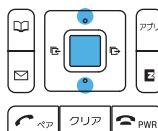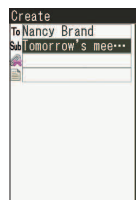Press  to select Sub (Subject), and press  (select).






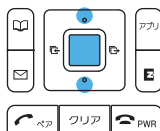
8

Enter the subject, and press  (ok).



9

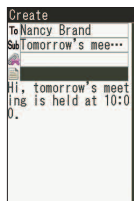
Press  to select  (Text), and press  (select).



10

Enter the main text, and press


 (ok).



11

Press  (send).

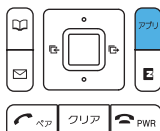The e-mail is sent.



# Opening a received e-mail

## When you receive an e-mail

A message and  appear in the idle screen.

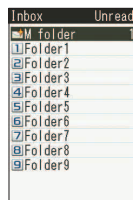
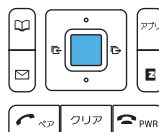


1


Press  (select).

Icon

: The folder containing new mail



2

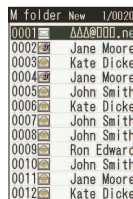
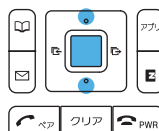
Press  to select the folder containing new mail, and press

 (select).

Icons

: The "read mail" that has already been read



: The "unread mail" that has not yet been read





3

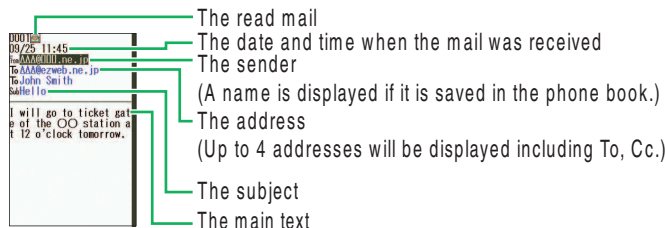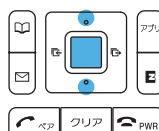Press  to select the new mail, and press  (viewer).

How to view received mail





 Hold down  for at least one second to change the font size.

 Press  or  to return to the received messages.

## To open an e-mail in the Inbox

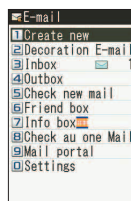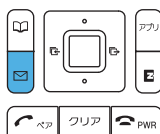1

Press  (mail) in the idle screen.





Icon

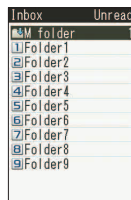
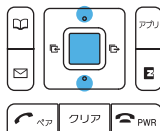


The "unread mail" that has not yet been read



The number on the right side is the number of unread mails.



2

Press  to select "Inbox," and press  (select).





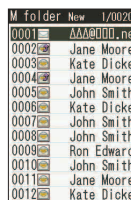
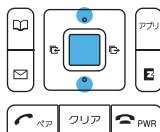
3

Press  to select the folder containing the mail you want to read, and press  (select).



4

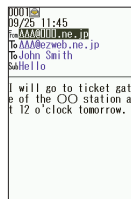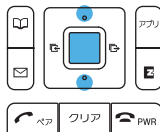Press  to select the mail you want to read, and press  (viewer).





# Searching e-mail

By sorting beforehand using mail marks, you can search e-mails by using the mail search function.

**1** See steps 1 to 4 in "To open an e-mail in the Inbox" (page 55) to display the e-mail to sort.



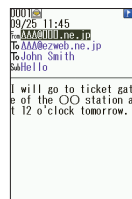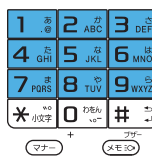
**2** Press **1**  to **9**  to attach the mail mark.



To cancel the mail mark, press the same number key again.



## ✚ To use mail search function

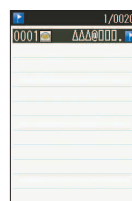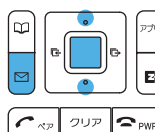**1** See steps 1 to 2 in "To open an e-mail in the Inbox" (page 55) to display the Inbox.


**2** Press  (search), press  to select the mail mark to search, and press  (select).



# Replying to a received e-mail


1

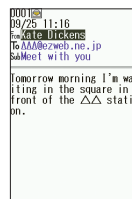
See steps 1 to 4 in "To open an e-mail in the Inbox" (page 55) to display the e-mail to reply.




2

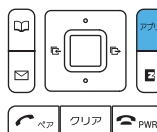Press  (reply).





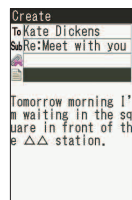 **Sub** (Subject) is prefixed with "Re:," and the main text of the e-mail is quoted.




3

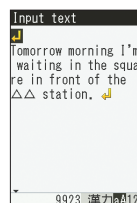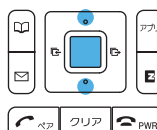Press  to select , and press  (select).



4

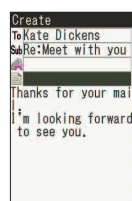
Input the main text, and press  (ok).



5

Press  (send).

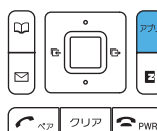The e-mail is sent.




# Reading e-mails with photo or movie attached

Example: To read an e-mail with photo and movie attached

1

See steps 1 to 3 in "Opening a received e-mail" (page 54) to view a mail.



The photo is displayed.

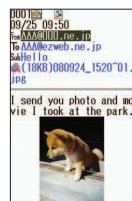

2

Press to select Attached data field, and press (select).


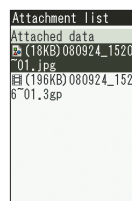
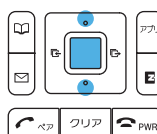
The Attachment list screen appears.



3

Press to select a file name, and press (recv).

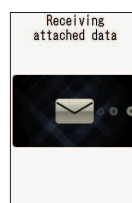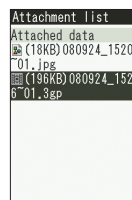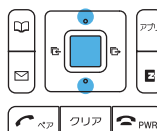The movie is received. Press (play) to view the movie.



Press to select a photo, and press (view) to display the entire photo on the screen.

Some attached data do not appear automatically depending on their size. If they do not appear, go to step 3.

It may take a short while to send/receive mails depending on the data attached to them or the reception strength of the place you are in.



# Filtering spam

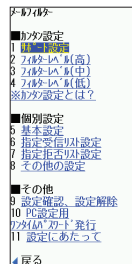
We recommend that you set our mail filter function to block spam.

Using Supportive setting, you can set mail filter function with simple operations answering onscreen questions.

## Setting the mail filter

Example: To access the Supportive setting

- ① Press (mail) in the idle screen. Press to select "Settings" → "Mail filter," and press (select).
- ② Press to select "Yes," and press (select). Press to select "次へ," and press (Select).
- ③ Enter your security code. Press to select "送信," and press (Select).
- ④ Press to select the item you want to confirm, and press (Select).



## Simple settings

### サポート設定 Supportive setting

You can set your mail filter preferences by answering questions.

This is recommended for those who want to confirm one's preferences step by step.

### フィルターレベル(高) Filter level (Strict)

You can block all incoming e-mails from PC.

This is recommended for those who use e-mail only between cellphones.

### フィルターレベル(中) Filter level (Moderate)

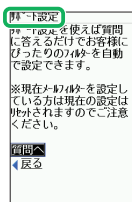
You can block the incoming e-mail from specified sender, also the e-mail with "未承諾広告※" in it's title, and spoof e-mail.

This is recommended for those who have troubles with spam sender.

### フィルターレベル(低) Filter level (Normal)

You can block the incoming e-mail containing "未承諾広告※" in it's title, and spoof e-mail.

This is recommended for all e-mail users.






By changing your e-mail address, you can prevent spam from being received. For details on how to change e-mail address, see pages 24 and 25.

# Using C-mail
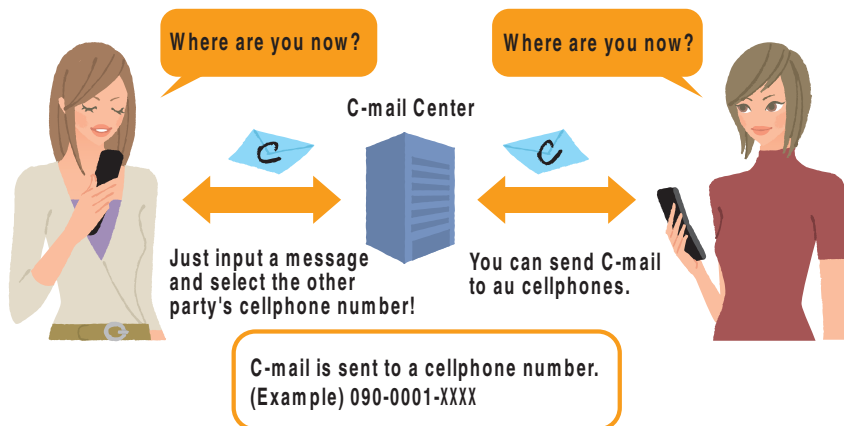
## About C-mail

C-mail allows you to exchange mail among other au cellphones that supports C-mail using cellphone numbers. You can send C-mail comprising up to 50 double/100 single byte characters.



-  C-mail transmission fee is charged when sending C-mail.
-  In overseas, EZ non-subscriber (including who once subscribed but cancelled EZ service) can not send C-mail.

## C-mail Safety Block

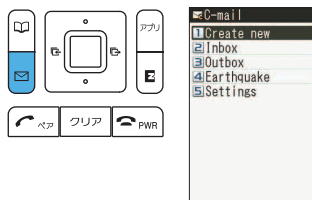
C-mail Safety Block allows you to reject C-mails that include URL (<http://△△△>, <https://△△△>) or phone numbers in the C-mail main text.

C-mail Safety Block is valid by default. You can cancel the setting to receive C-mails that include URL or phone numbers.

# Creating and sending C-mail


1

Hold down  (mail) for at least one second in the idle screen.




2

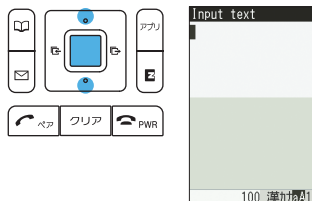Press  to select "Create new," and press  (select).




3

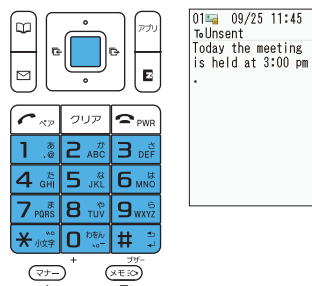Enter the main text, and press  (ok).





4

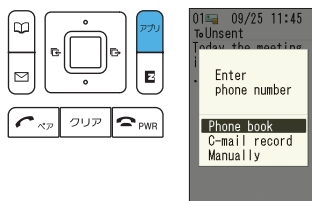
Press  (send).



➡ Continued on the next page



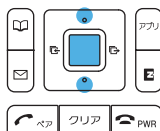5



Press  to select "Phone book," and press  (select).



You can also select a phone number from sent/received messages or enter a phone number manually.


6

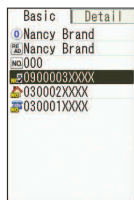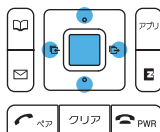Press  to select a person you want to send a C-mail to, and press  (select).



7

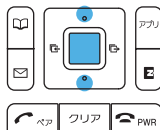
Press  to select a phone number, and press  (select).



8

Press  (select).

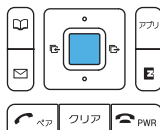The C-mail is sent.



## Opening a received C-mail

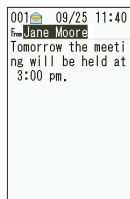
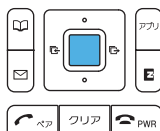
When you receive a C-mail

A message and  appear in the idle screen.



1



Press  (select).



To open a C-mail in the Inbox

1

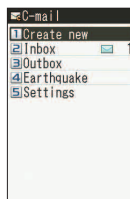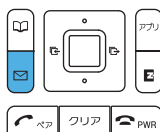Hold down  (mail) for at least one second in the idle screen.





Icon

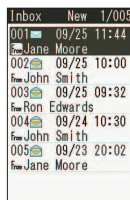
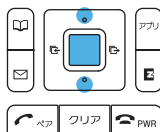


The "unread mail" that has not yet been read



The number on the right side is the number of unread mails.


2

Press  to select "Inbox," and press  (select).



3

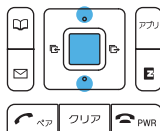Press  to select the C-mail you want to read, and press  (viewer).



# Camera

The W64S has a 3.19 Megapixel camera and allows you to take photos and record movies.

## What you can do with the camera

### ■ ■ You can use images on the W64S.

You can set photos you took as the image for the idle screen, set them to display when you have an incoming call, or save photos or movies to the phone book.



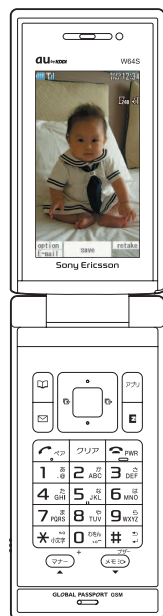
### ■ ■ You can mail photos and movies.

You can send images up to 500 KB<sup>※1</sup> by attaching to an e-mail.

※1 It may take a short while to send/receive mails depending on the reception strength of the place you are in.




Page  
69



### ■ ■ You can print out photos or browse them using a PC.

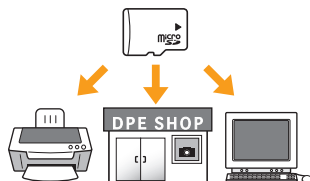
You can save photos you took in the microSD<sup>TM</sup> Memory Card and print them out with a printer or at a DPE shop, or browse them using a PC.




# Successful taking of photos

## How to hold the W64S

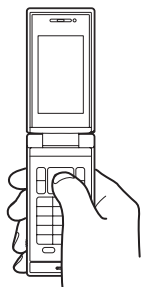
To take "Photo (Wallpaper)" photos




To take "Photo (Digital Camera)" photos

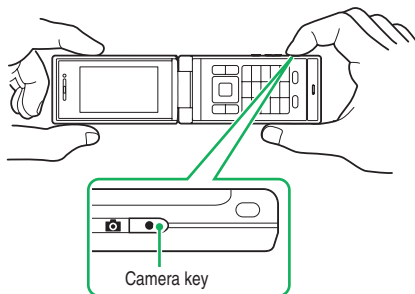

To take in Recording oneself style

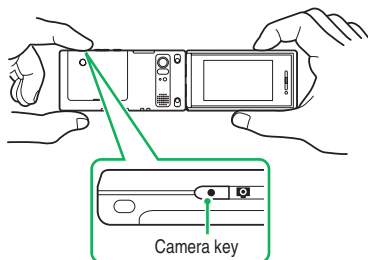

To take in Media style

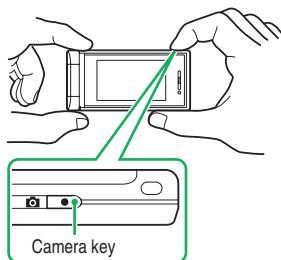

## How to set the W64S

① **Hold your bent arm tight against your body.**

② **Hold the main unit not to shake it.**

If your armpits are open or your arms are stretched, the main unit may move and it may cause a blur.

③ **Be sure not to cover the lens with your fingers.**

Smeared lens (with fingerprint, etc.) can blur your images.

## To stabilize the shot

① **Do not move the main unit.**


Do not move the main unit after you press the shutter until the shutter sound stops.  
Be careful especially when you shoot in the dark.

② **Use self-timer.**

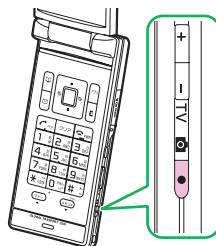
You can prevent a blur caused by pressing the shutter.

# Taking photos

1

Hold down  (Camera key) on the side of your cellphone for at least one second in the idle screen.


The photo monitor screen appears.




The photo monitor screen appears in the previous selected size. "3M" is set by default.

2

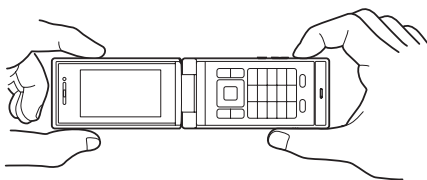
Hold the W64S horizontally with both hands. View the subject you want to take on the photo monitor screen.




3

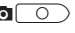Half-press  (Camera key) on the side of your cellphone.

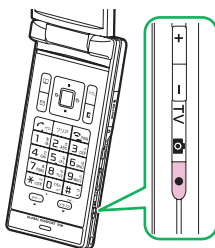W64S camera automatically focuses on the subject. The frame's color turns into green from white with a short sound.




You can also automatically focus on the subject by pressing  (AFlock).



4

Full press  (Camera key) on the side of your cellphone.

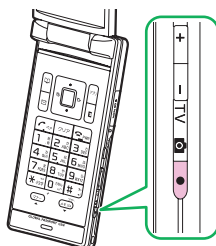
You hear the shutter sound, and the photo you have taken is displayed (preview screen).




5


Press  (Camera key) on the side of your cellphone.

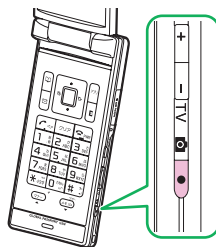
"Saved in data folder" appears, and the display returns to the monitor screen.



 You can also save photos by pressing  (save).

 Photos are saved in the "Photo folder" in the data folder if the microSD™ Memory Card is not inserted.

 Seven photo shooting modes (shown below) are available.

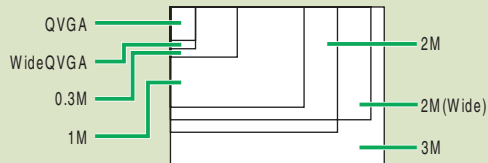


## About the microSD™ Memory Card

If you take photos with "0.3M," "1M," "2M," "2M(Wide)," or "3M" with inserting the microSD™ Memory Card in the W64S, the images are saved in the "DigiCame fldr" in the microSD™ Memory Card.

# Viewing photos you have taken

1

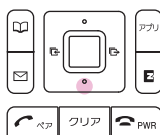Hold down  for at least one second in the idle screen.



D fldr Left47ME	
Data disp	485
User folder	⇒
Private folder	⇒
Movie folder	⇒
Photo folder	⇒
Voice folder	⇒
TV rec data	1
LISMO	⇒
No License	1
Sound	2
EZmovie	2
Graphic	126

2

Press  to select "Photo folder," and press  (select).

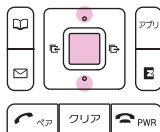


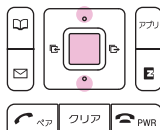


Photo folder	
Data disp	9
09/25 Thu	3
09/24 Wed	6



3


Press  to select the date folder containing the photo you want to view, and press  (select).



09/25 Thu	
080825_1234'01	08/09/25 12:34
080825_1130'01	08/09/25 11:30
080825_0945'01	08/09/25 09:45


4


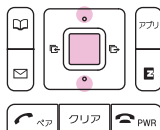
Press  to select the photo you want to view, and press  (view).



# Attaching a photo to e-mail



1

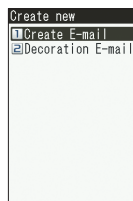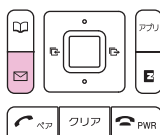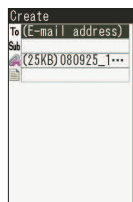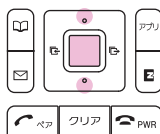Press  (E-mail) in the preview screen immediately after you have taken the image.











2

Press  to select "Create E-mail," and press  (select).



The create screen appears.

For details on how to create and send e-mail, see steps 3 to 11 on page 51 to 53.

-  The photo or the movie you have taken is automatically attached to an e-mail  (Attached data).
-  "Other phone cannot play size over case happen" may appear. Press  to select "Attach on," and press  (select).
-  "Cannot attach over 500KB Resize?" may appear. Press  to select "Yes," and press  (select) to select the size.

# EZweb

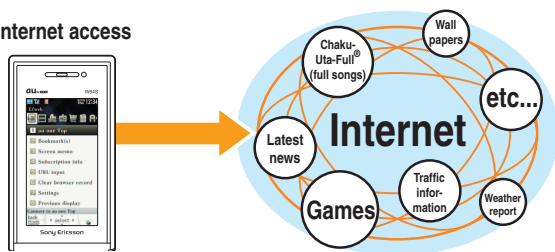
 EZweb subscription required

## About EZweb

EZweb is an information service that allows you to enjoy the Internet on your cellphone. With EZweb, you can obtain Chaku-Uta-Full® (full songs), the latest news, and other contents from information sites.

- You need to subscribe to the EZweb service to use the EZweb service. Contact an au shop or au Customer Service Center if you did not subscribe to the service at the time of purchase.
- Make initial settings before using. If you have not made initial settings yet, see page 23. However, initial settings cannot be made from overseas.

Internet access






Data communications fee (varied by the sent/received data amount, regardless of the connection time) is charged when connecting EZweb.



## Displaying the au one Top

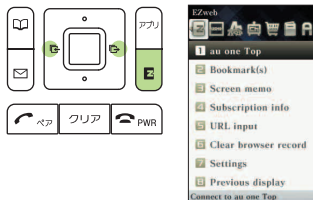
Press  (EZ) in the idle screen.

Press   to select  (EZweb).



Press  (  ) in the EZweb screen, and you can access to "PlayNow by Sony Ericsson."

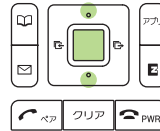Press  to select  
 "au one Top," and press  
 (select).



<b>検索 (Keyword search function)</b>	Provides information search function by keywords
<b>カテゴリ(メニューリスト) (Category search function)</b>	Provides a list of sites offering each contents
<b>トップニュース (Top news)</b>	Provides the automatically-updated latest news
<b>最新オススメ情報 (Latest recommended information)</b>	Introduces hot information on entertainment, living and contents
<b>①天気(Weather) ②乗換(Transfer) ③占い(Fortune-telling) ④テレビ(TV programs) ⑤銀行(Banking)</b>	
<b>買う (Shopping Information)</b>	Provides information on internet shopping and internet auction which allows you to sell and buy goods easily
<b>知る (Useful information)</b>	Provides information on sports and stock prices, also useful tools such as map and dictionary
<b>楽しむ (Entertainment information)</b>	Provides the latest information on hobby such as games, music, e-book, and entertainment trends
<b>暮らす (Living information)</b>	Provides daily life useful information such as gourmet and travel
<b>集まる (Community information)</b>	Provides appealing information about features like SNS, Blog, etc. you might want to try
<b>メール(大容量6GB) (Mail (6GB storage capable))</b>	Provides another e-mail address for both cellphone and PC use
<b>マイページ (My Page)</b>	Provides various information, useful tools or mass data storage capabilities to suit your needs
<b>au style</b>	Introduces au-recommended information and sites
<b>とくする情報 (Valuable information)</b>	Provides gifts and beneficial information exclusively for EZweb service subscribers for free
<b>auお客さまサポート (au Customer Support)</b>	Provides phone bills, procedures, au online manual, and notice from au
<b>auワンちゃんの部屋 (au ワンちゃん's room)</b>	Introduces you to the contents of the au ワンちゃん mascot
<b>カンタンアクセス・オープンサイト (Simple Access &amp; Open Site)</b>	Introduces Simple Access and Open Site
<b>災害用伝言板 (Disaster Message Board)</b>	Registers/checks the vital information in disasters
<b>ENGLISH</b>	Introduces English sites




It may take a short while for each screen to appear.





The screen layout and contents are just examples. These are subject to change.



# Saving your favorite sites

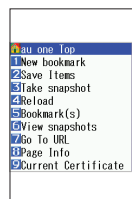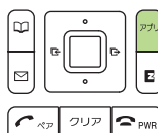
1

Display the site you want to save, and press  (Browser Menu).




2

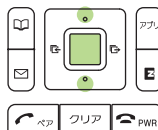Press  to select "New bookmark," and press  (Select).



3

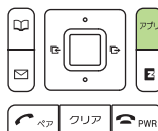


Press  (cmplt).





You can save up to 100 sites in the Bookmark. However, some sites may not be saved.


# Viewing a site saved to the Bookmark

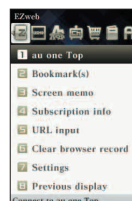
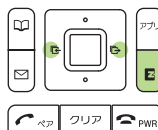
1

Press  (EZ) in the idle screen.  
Press  to select  (EZweb).







2

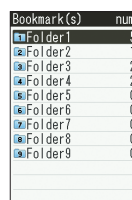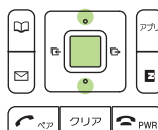Press  to select "Bookmark(s)," and press  (select).





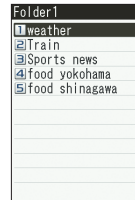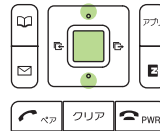
3

Press  to select a folder, and press  (select).



4

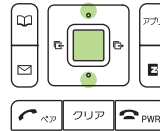Press  to select the site you want to view, and press  (select).




## Confirming your call costs





You can confirm call and communication charges.

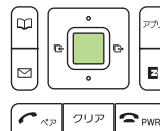1

Press  (menu) in the idle screen.

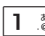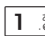

2

Press  .  
Press  to select "Yes," and press  (select).


Select the item you want to confirm.



# Downloading Chaku-Uta®(ringtones)/Chaku-Uta-Full®(full songs)

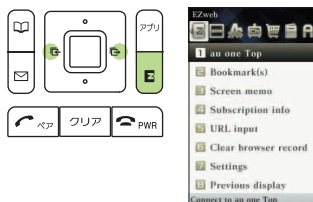
1

Press **E** (EZ) in the idle screen.  
Press **◀▶** to select **EZweb**.




2

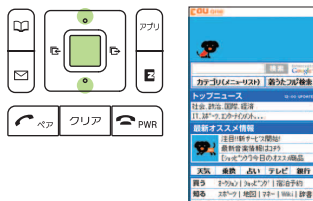Press **↑↓** to select "au one Top,"  
and press **■** (select).




3

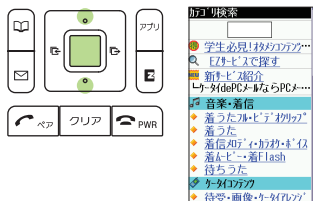Press **↑↓** to select  
"カテゴリ(メニューリスト),"  
and press **■** (OK).




4

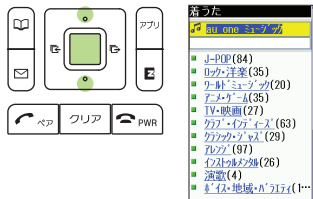Press **↑↓** to select "着うた" or  
"着うたフル・ビデオクリップ,"  
and press **■** (Select).



5

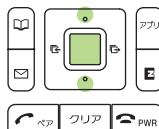Press **↑↓** to select the desired  
site, and press **■** (Select).




Follow the on-screen instructions to select  
the melody you want to download.



## 6

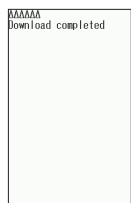**Select and download a melody.**

Download the melody by following the on-screen instructions.



To use paid information site, you must enter the EZ Password or the Premium EZ Password. EZ Password or Premium EZ Password is any 4-digit number that you wrote in the application form.



The screen layout and contents are just examples. These are subject to change.

# EZ News Flash

 EZweb subscription required

## What you can do with EZ News Flash

EZ News Flash is a service distributing updated news, weather, and fortune telling information to the idle screen for no charge.

Updated news is always displayed on the idle screen as a scrolling ticker, and you can browse detailed information by selecting it. You can use EZ News Flash easily with simple settings just after making initial settings for EZweb (page 23). All information is distributed for no charge.

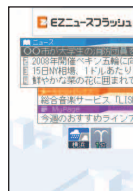
- ※ When updating EZ News Flash by manual operation or connecting to EZweb site, data communications fee may be required. If data communications fee is required, confirmation screen appears.
- ※ The service is unavailable in Overseas (GSM) mode.

Select and operate  
from the idle screen




Select the ticker, and press  (select).




Browse news



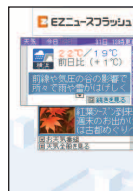Select the window, and press  (select).

Browse weather





-  The information is updated in regular time intervals.  appears while receiving information.
-  If you are using "au one My Page," you can confirm the updated contents by selecting "My Page" from the top page of EZ News Flash.



# Setting EZ News Flash service

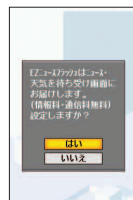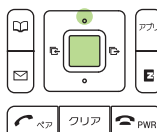You can use EZ News Flash with simple settings for no charge.





Make settings for EZ News Flash after making initial settings for EZweb (page 23).


1

Press  in the idle screen to select the ticker, and press  (select).



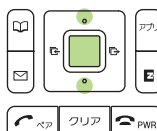2














Press  to select "はい," press  (選択), press  to select "OK," and press  (Select).



Setup is complete.

When you complete setup and return to the idle screen, a message "次回配信までしばらくお待ち下さい。" will be displayed on the ticker.

## Canceling EZ News Flash service

- ① Press  in the idle screen to select the ticker, and press  (select).
- ② Press  (メニュー), press  to select "サービス設定解除," and press  (選択).
- ③ Press  to select "YES," press  (選択), press  to select "解除する," and press  (Select).
- ④ Press  to select "OK," press  (Select), press  to select "OK," and press  (Select).

## Changing settings of receiving notifications

You can change the settings of volume, tone, vibrator, and indicator which notifies EZ News Flash was distributed.

If you do not need notifications when receiving EZ News Flash, set the volume to "off".

# EZ Navi

 EZweb subscription required

## What you can do with EZ Navi

EZ Navi is a handy service using location information by GPS.

The service is unavailable in Overseas (GSM) mode.

The service is unavailable when recording Television (1Seg).



### A When the front passenger check for driving route information: "Passenger Seat Navi"

Passenger Seat Navi is the service for the passenger (sitting next to the driver) to provide the optimum route information to the destination using map and voice navigation.

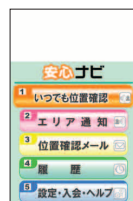


### B When you want to know where your child is: "Security Navi"

"Security Navi" application provides three features.

**"Auto Position Search" (paid), "Area Message" (free), "Position Search Mail" (free)**

With the operation from W64S, you can check the position of an au cellphone supporting "Position Search." Also, W64S automatically sends a notice message to specified au cellphone under the following condition; during specified time frame, the person (with W64S) enters (or stays)/leaves (or is no longer in) specified area.



## C When you go out: "EZ Navi Walk"

You can display various menus convenient for going out.



ナビをする★	Route information (voice prompt) for your destination or search shops/facilities around
地図を見る(無料)★	See your current position or selected map
乗換検索する(無料※1)★	Search transit/time table or railway information
道路情報を見る	See real time route information nationwide
もっとナビウォーク	Provides information on settings and PC cooperative service
インフォメーション	Membership registration or inquiries

The star symbol shows that you can use your voice to enter search terms. This is called "Voice input" function.

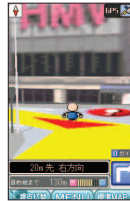
※1 Some menus are paid service.

### Measuring current position



The result of the first measurement is displayed as ★ on the map. Your current location will be displayed as in real time by successive measurement.

### 3D Navi



Change to 3D display around guidance point or your destination. Navigation engine by NAVITIME JAPAN  
Map: Shobunsha Publications, Inc./  
©2008 ZENRIN CO., LTD./  
Geographical Survey Institute  
3D data: ©2008 ZENRIN CO., LTD./  
GEO Technical Laboratory Co., Ltd.  
Z06A-No. 2137

## D When you try to find nearest evacuation sites or your way home: "Evacuate Navi"

Even when you have difficulty to get connected due to large scale disaster, W64S provides map/route information for evacuation sites or your way home using preset map data ("Evacuate Area Map"). Also, you can download various application programs from "Evacuate Navi" EZwebsite (for example, "Route Home Map" program provides map/route information between two places you specified, like "Office to Home").

- To get these map/route information, you need to save GPS information of your home to phone book on au cellphone, and set it as destination beforehand.
- To use some of the programs, application fee is charged respectively.

### Evacuate Area Map



### Route Home Map



Map: Shobunsha Publications, Inc./  
Preparation: Asia Air Survey Co., Ltd.

- For the use of EZ Navi, data communications fee is charged. And to use some of the services, information fee is charged in addition to the data communications fee.
- Regarding evacuation sites or other disaster related information, follow instructions by police, fire brigade, or local authority. Those instructions always take priority over the provided map/route information on the screen.
- For the use of "Evacuate Navi," it may take a short while to get GPS information of your current location depending on the GPS satellite conditions.
- The screen layout and contents are just examples, and may differ from the actual screen.

# au Media Tuner

 EZweb subscription required

You can view Television (1Seg), EZ Channel-Plus and EZ Channel.

## What you can do with au Media Tuner

### Television (1Seg)

You can view the "1Seg" television service, which has begun broadcasting digital terrestrial television in Japan for cellphones and portable devices.

For details on the "1Seg" television service, see the following websites.

The Association for Promotion of Digital Broadcasting

From your PC: <http://www.dpa.or.jp/>

From your cellphone: <http://www.dpa.or.jp/1seg/k/>

 
Page  
**83**

### EZ Channel-Plus

You can enjoy registered programs with EZ Channel-Plus or EZ Channel.

#### Antenna for Television (1Seg)






There are two antennas for viewing Television (1Seg) with W64S. The Built-in TV antenna which is built in the main unit, and the Sony Ericsson round-type earphone jack conversion adaptor 03 which comes with W64S. When you attach the Sony Ericsson round-type earphone jack conversion adaptor 03, the antenna automatically switches.



Built-in TV antenna

- If the reception strength is not strong enough, open the main unit. Reception strength will improve with the main unit open.
- When viewing Television (1Seg) in Media style, connecting the stereo earphone and the Sony Ericsson round-type earphone jack conversion adaptor 03 is recommended (Page 13).


When the stereo earphone and the Sony Ericsson round-type earphone jack conversion adaptor 03 is connected, sound will be outputted from the stereo earphone by default. To output sound from the speaker, set "スピーカー" (Speaker) for "音声出力先設定" (Sound output settings) of "音声設定" (Sound settings).

-  You need to make initial settings before using au Media Tuner. If you have not made initial settings yet, see page 23.
-  No call or data communication fees are charged for using au Media Tuner to view Television (1Seg). No data communication fees are charged for viewing data broadcasting programs. However, data communication fees are charged when using services such as program guide acquisition, song title search function, and accessing information sites on EZweb or acquiring additional information from information provided by data broadcasting programs.
-  When remaining battery level shows , you can not start au Media Tuner.
-  The approximate continuous viewing time is shown below. The time will differ depending on operation of such as data broadcasting programs.

Television (1Seg)	Reception time <sup>※1</sup>	Using earphone	Time with DBEX ON : 4 hours, 40 minutes Time with DBEX OFF : 4 hours, 50 minutes
		Using speaker	Time with DBEX ON : 4 hours, 40 minutes Time with DBEX OFF : 4 hours, 40 minutes
		Recording time <sup>※2</sup>	
			Data folder (Main unit): 20 minutes microSD Card: 11 hours



※1 Time measured with full-screen display, volume set to [10].

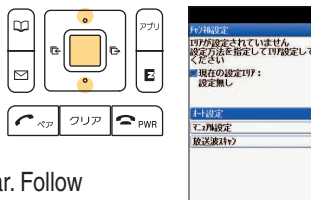
※2 Actual recording time may vary depending on the contents of the program.

-  The screen layout and contents are just examples. These are subject to change.


To view Television (1Seg) by using au Media Tuner, you need to make initial settings for both au Media Tuner and Television (1Seg).

[illegible]

**2** Confirm the precautions, press  to select "OK," and press  (選択).



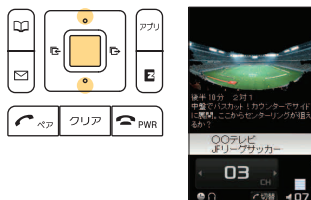
Press  to select "オート設定," and press  (選択).






# Viewing Television (1Seg)

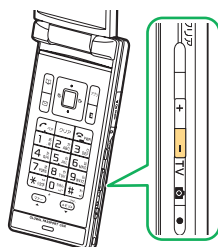
1



Hold down  TV (TV key) on the side of your cellphone for at least one second in the idle screen.



Television operation screen

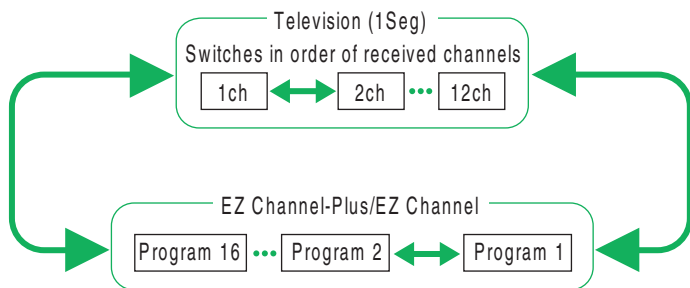
Television (1Seg) starts in the mode you used the last time, and the channel selected when you used the last time is displayed (television operation screen).

After receiving data broadcasting, the screen automatically switches to data operation screen. If you want to switch to television operation screen, press  (テレビ操作).

Pressing   while the television operation screen is displayed will switch the channel.




Data operation screen



# Viewing Television (1Seg) in Media style

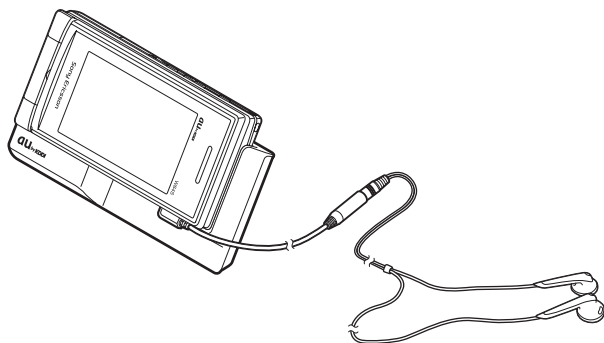After making initial settings for au Media Tuner, you can view Television (1Seg) in Media style. You can also view Television (1Seg) while charging the battery using the desktop holder.



1

Hold down TV (TV key) on the side of your cellphone for at least one second in the idle screen.



2

Set W64S to Media style.

Press TV to adjust the volume. Press to switch the channel.

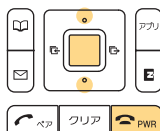


When "Launch Set" is set to "TV (1Seg)," Television (1Seg) will start just by setting W64S to Media style in the idle screen.












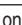
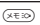
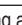
## Ending au Media Tuner

1


Press PWR, press to select "Quit," and press (select).



# Troubleshooting

Symptom	Items to check	Solution	Page
Unable to turn the power on.	Is the battery pack properly installed?	Properly install the battery pack.	—
	Is the battery pack charged?	Charge the battery pack.	12
	Did you hold down  for at least one second?	Hold down  for at least one second.	16
Unable to make calls.	Is "  " displayed on the screen?	Make a call from a location where "  " is not displayed.	16
	Did you enter the area code when entering the phone number?	When making a call to a phone other than a cellphone, first enter the area code even when both parties are inside the same city.	27
	Is the power turned on?	Hold down  for at least one second.	16
	Did you press  ?	Press  .	27
	Is W64S set to Recording oneself style or Media style?	Set W64S to Normal style.	22
	Is the Area Setting properly set?	For making a call in Japan, set "Japan" in Area Setting.	26
Unable to receive calls.	Is "  " displayed on the screen?	Move to a location where "  " is not displayed.	16
	Is the power turned on?	Hold down  for at least one second.	16
No reaction when a key is pressed.	Is the power turned on?	Hold down  for at least one second.	16
	Is the side keylock set?	Hold down  for at least one second to cancel side keylock.	15
Warning tone sounds, and power turns off.	There is not enough power remaining in the battery pack.	Charge the battery pack.	12
Incoming calls are automatically answered.	Is the record message set?	Hold down  for at least one second to cancel the record message.	34
Unable to hear the other party.	Is the volume during a call set too low?	Press  while you are talking. The volume during a call will increase.	30
Television (1Seg) does not show.	Is the Built-in TV antenna covered with your hands?	Open the main unit to improve reception strength. In Media style, reception strength improves with the Sony Ericsson round-type earphone jack conversion adaptor 03 attached.	80
Television (1Seg) reception is poor.	You can not view Television (1Seg) if the reception strength is not strong enough.		—

Please visit the au web site for more information.

- From W64S ⇒  (EZ) ⇒  (EZweb) ⇒ "au one Top" ⇒ "auお客さまサポート" (au Customer Support) ⇒ "調べる" ⇒ "オンラインマニュアル" ⇒ "故障診断Q&A"
- From your PC ⇒ (<http://www.kddi.com/customer/service/au/trouble/kosho/index.html>)



# Remote Ctrl Lock

## In case you have lost your W64S










Using Remote Ctrl Lock, you can lock your W64S (Auto lock, FeliCa lock and Phone book lock) remotely against unauthorized use.

### ■ ■ To set up the working environment of Remote Ctrl Lock

Auto lock, FeliCa lock and Phone book lock are enabled by calling to your W64S specific times from the phone number specified beforehand.

- ① Press  (menu) in the idle screen → press   .
- ② Enter Lock No., and press  (ok).

Rmt.CtrlLock	M414
Rmt.CtrlLock	OFF
Data erase	OFF
Local unlock	OFF

- ③ Press  to select "Rmt.CtrlLock," and press  (select). Set each item below:  
"Set" : Select "ON"/"OFF."  
"Duration" : Enter the time (1 to 10 minutes) as for the time frame starting with the first incoming call to be ended with set times call.  
"Frequency" : Enter the times of incoming call (3 to 10 times) to set and release Remote Ctrl Lock.  
"Caller" : Register phone number (up to 3 numbers) to use when setting and releasing Remote Ctrl Lock.
- ④ Press  to select "Data erase" → "Erase"/"Not erase," and press  (select). To set "Erase," press  to select "Yes," and press  (select).  
Set whether to delete saved data when setting Remote Ctrl Lock or not.
- ⑤ Press  to select "Local unlock" → "ON"/"OFF," and press  (select).  
Set whether to release Remote Ctrl Lock by entering Lock No. or not.
- ⑥ Press  (back).

## To set Auto lock, FeliCa lock and Phone book lock on W64S by Remote Ctrl Lock

**Make a call to W64S under the working condition (Duration, Frequency, Caller) set by Remote Ctrl Lock.**

Remote Ctrl Lock is set, and announcement is played notifying that Remote Ctrl Lock is set.



Remote Ctrl Lock cannot be set if W64S is turned off or in the area where reception strength is not good.



"Not erase" (for "Data erase") and "OFF" (for "Local unlock") are set by default.

## To lock Remote Ctrl Lock on W64S by Security Lock Service

With no Remote Ctrl Lock setting has been made, call au Customer Service Center or visit our web site from your PC to set Auto lock, FeliCa lock and Phone book lock. You can use Security Lock Service with no charge.

### **au Customer Service Center**

From au cellphones:

113 area code not required (toll free)

From other operators'/regular phones:



0077-7-113 (toll free)

(24 hrs a day)

Follow the voice guidance to set the lock.

### **au Customer Support**

Visit our au Customer Support web site (<http://cs.kddi.com/>) and follow the onscreen instructions to set the lock.

※Application required for the first time use (we also accept your application after the loss).








You cannot set the lock if W64S is turned off or in the area where reception strength is not good.

# Other features

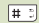
## Safety Buzzer

To show that you are in emergencies, you can use the Safety Buzzer function in extreme volume sound. To use this function, set the Safety Buzzer to "ON" beforehand.

### To set the Safety Buzzer "ON"

- ① Press  (menu) in the idle screen → press  .
- ② Press  to select "ON," and press  (select).



While Safety Buzzer is set to "OFF," you can set Safety Buzzer "ON" by holding down  for at least one second in the idle screen.


### To use the Safety Buzzer

Hold down  for at least one second in the idle screen.

#### To stop the Safety Buzzer sound

Enter the Lock No..

Security buzzer

 Stop security buzzer with lock no. input



The Safety Buzzer sound continues until Lock No. is entered or battery is fully discharged.



Even with the manner mode set or stereo earphone connected, the Safety Buzzer sounds from speaker.



While the Safety Buzzer sound continues, you cannot turn W64S off or perform other operations. But you can dial 110 (Police), 118 (Japan Coast Guard), and 119 (Fire brigade).

### GlobalAssort Menu

You can use tools such as Twin Planet Clock and Global Calculator which is useful both in Japan and Overseas.

### EZ keitai-arrange

You can set/change ringtones or designs of the idle screen, icons, etc. collectively. Also, you can use downloaded data for those settings.

### au one My Page

You can save data such as a phone book, e-mail, or the data in the data folder to au one My Page.

### Various ways to get audio files

You can enjoy your favorite songs by EZ "Chaku-Uta-Full<sup>®</sup>" (full songs), the full length music download service, and also enjoy other audio files transferred from your music CDs via au Music Port.

### EZ apps (BREW<sup>®</sup>)

You can download game software from EZweb sites and play games.


### Infrared data exchange feature

You can exchange data such as a phone book, profile, or the data in the data folder between au cellphones that support infrared data exchange.

### PC Site Viewer

You can view WEB sites intended for PC on W64S with smooth high-speed data communication.

### Fake Incoming Call

Holding down  for at least one second makes ringtone sound as if you have an incoming call.

# Radio Wave Exposure and Specific Absorption Rate (SAR) Information

★ Mobile Phone GSM/GPRS 900/1800/1900

## United States & Canada

THIS PHONE MODEL HAS BEEN CERTIFIED IN COMPLIANCE WITH THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

The W64S mobile phones have been designed to comply with applicable safety requirements for exposure to radio waves. Your wireless phone is a radio transmitter and receiver. It is designed to not exceed the limits\* of exposure to radio frequency (RF) energy set by governmental authorities. These limits establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by international scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a safety margin designed to assure the safety of all individuals, regardless of age and health.

The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate (SAR). Tests for SAR are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands. While there may be differences between the SAR levels of various phone models, they are all designed to meet the relevant guidelines for exposure to radio waves. For more information on SAR, please refer to the safe and efficient use chapter in the User Guide.

The highest SAR value as reported to the authorities for this phone model when tested for use by the ear is 0.57 W/kg\*, and when worn on the body is 0.09 W/kg\* for speech and 0.22 W/kg\* for data calls. Body worn measurements are made while the phone is in use and worn on the body with a Sony Ericsson accessory supplied with or designated for use with this phone. It is therefore recommended that only Ericsson and Sony Ericsson original accessories be used in conjunction with Sony Ericsson phones.

\*\*Before a phone model is available for sale to the public in the US, it must be tested and certified by the Federal Communications Commission (FCC) that it does not exceed the limit established by the government-adopted requirement for safe exposure\*. The tests are performed in positions and locations (i.e., by the ear and worn on the body) as required by the FCC for each model. The FCC has granted an Equipment Authorization for this phone model with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. While there may be differences between the SAR levels of various phones, all mobile phones granted an FCC equipment authorization meet the government requirement for safe exposure. SAR information on this phone model is on file at the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea> after searching on FCC ID PY7A5880001 Additional information on SAR can be found on the Cellular Telecommunications & Internet Association (CTIA) website at <http://www.ctia.org>.



\* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The standard incorporates a margin of safety to give additional protection for the public and to account for any variations in measurements.

\*\* This paragraph is only applicable to authorities and customers in the United States.

## Europe

This mobile phone model W64S has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands.

While there may be differences between the SAR levels of various phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

For more information on SAR, please refer to the safety chapter in the User's Guide.

SAR data information for residents in countries that have adopted the SAR limit recommended by the International Commission of Non-Ionizing Radiation Protection (ICNIRP), which is 2 W/kg averaged over ten (10) gram of tissue (for example European Union, Japan, Brazil and New Zealand):

The highest SAR value for this model phone tested by Sony Ericsson for use at the ear is 0.36 W/kg (10g).

## Radio Frequency (RF) exposure and Specific Absorption Rate (SAR)

When the phone or Bluetooth handsfree is turned on, it emits low levels of radio frequency energy. International safety guidelines have been developed through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure. The guidelines include a safety margin designed to assure the safety of all persons and to account for any variations in measurements.

Specific Absorption Rate (SAR) is used to measure radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but because the phone is designed to use the minimum power necessary to access the chosen network, the actual SAR level can be well below this value. There is no proof of difference in safety based on difference in SAR value.

Products with radio transmitters sold in the US must be certified by the Federal Communications Commission (FCC). When required, tests are performed when the phone is placed at the ear and when worn on the body. For body-worn operation, the phone has been tested when positioned a minimum of 15 mm from the body without any metal parts in the vicinity of the phone or when properly used with an appropriate Sony Ericsson accessory and worn on the body.

For more information about SAR and radio frequency exposure go to:  
[www.sonyericsson.com/health](http://www.sonyericsson.com/health).

## Guidelines for Safe and Efficient Use

Please follow these guidelines. Failure to do so might entail a potential health risk or product malfunction. If in doubt as to its proper function, have the product checked by a certified service partner before charging or using it.



### Recommendations for care and safe use of our products

- Handle with care and keep in a clean and dust-free place.
- **Warning!** May explode if disposed of in fire.
- Do not expose to liquid or moisture or excess humidity.
- For optimum performance, the product should not be operated in temperatures below +5° C (+41° F) or above +35° C (+95° F). Do not expose the battery to temperatures above +35° C (+95° F).
- Do not expose to flames or lit tobacco products.



- Do not drop, throw or try to bend the product.
- Do not paint or attempt to disassemble or modify the product.



- Consult with authorized medical staff and the instructions of the medical device manufacturer before using the product near pacemakers or other medical devices or equipment.
- Discontinue use of electronic devices or disable the radio transmitting functionality of the device where required or requested to do so.
- Do not use where a potentially explosive atmosphere exists.
- Do not place your product or install wireless equipment in the area above an air bag in a car.
- **Caution:** Cracked or broken displays may create sharp edges or splinters that could be harmful upon contact.

### Children



**Warning!** Keep out of the reach of children. Do not allow children to play with mobile phones or accessories. They could hurt themselves or others. Products may contain small parts that could become detached and create a choking hazard.

### Power supply (Charger)

Connect the charger to power sources as marked on the product. Do not use outdoors or in damp areas. Do not alter or subject the cord to damage or stress. Unplug the unit before cleaning it. Never alter the plug. When a power supply is connected there is a small drain of power. To avoid this small energy waste, disconnect the power supply when the product is fully charged.

## Battery

New or idle batteries can have short-term reduced capacity. Fully charge the battery before initial use. Use for the intended purpose only. Charge the battery in temperatures between +5° C (+41° F) and +35° C (+95° F). Do not put the battery into your mouth. Do not let the battery contacts touch another metal object. Turn off the product before removing the battery. Performance depends on temperatures, signal strength, usage patterns, features selected and voice or data transmissions. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.

## Personal medical devices

Mobile phones may affect implanted medical equipment. Reduce risk of interference by keeping a minimum distance of 22cm (8.7 inches) between the phone and the device. Use the phone at your right ear. Do not carry the phone in your breast pocket. Turn off the phone if you suspect interference. For all medical devices, consult a physician and the manufacturer.

## Driving

Some vehicle manufactures forbid the use of phones in their vehicles unless a handsfree kit with an external antenna supports the installation. Check with the vehicle manufacturer's representative to be sure that the mobile phone or Bluetooth handsfree will not affect the electronic systems in the vehicle. Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

## GPS/Location based functions

Some products provide GPS/Location based functions. Location determining functionality is provided "As is" and "With all faults". KDDI/Sony Ericsson does not make any representation or warranty as to the accuracy of such location information.

Use of location-based information by the device may not be uninterrupted or error free and may additionally be dependent on network service availability. Please note that functionality may be reduced or prevented in certain environments such as building interiors or areas adjacent to buildings.

**Caution:** Do not use GPS functionality in a manner which causes distraction from driving.

## Emergency calls

Calls cannot be guaranteed under all conditions. Never rely solely upon mobile phones for essential communication. Calls may not be possible in all areas, on all networks, or when certain network services and/or phone features are used.

## Malware

Malware (short for malicious software) is software that can harm the mobile phone or other computers. Malware or harmful applications can include viruses, worms, spyware, and other unwanted programs. While the device does employ security measures to resist such efforts, KDDI/Sony Ericsson does not warrant or represent that the device will be impervious to introduction of malware. You can however reduce the risk of malware attacks by using care when downloading content or accepting applications, refraining from opening or responding to messages from unknown sources, using trustworthy services to access the Internet, and only downloading content to the mobile phone from known, reliable sources.

## Accessories

Use only KDDI original accessories. KDDI/Sony Ericsson does not test third-party accessories. Accessories may influence RF exposure, radio performance, loudness, electric safety and other areas. Third-party accessories and parts may pose a risk to your health or safety or decrease performance.

## Disposal of old electrical and electronic equipment



Electronic equipment and batteries should not be included as household waste but should be left at an appropriate collection point for recycling. This helps prevent potential negative consequences for the environment and human health. Check local regulations by contacting your local city office, your household waste disposal service, the shop where you purchased the product.

## Disposing of the battery



Check local regulations or call a Sony Ericsson call centre for information. Never use municipal waste.

## Memory Card

If the product comes complete with a removable memory card, it is generally compatible with the handset purchased but may not be compatible with other devices or the capabilities of their memory cards. Check other devices for compatibility before purchase or use. If the product is equipped with a memory card reader, check memory card compatibility before purchase or use.

Memory cards are generally formatted prior to shipping. To reformat the memory card, use a compatible device. Do not use the standard operating system format when formatting the memory card on a PC. For details, refer to the operating instructions of the device or contact customer support.

## Warning!

If the device requires an adapter for insertion into the handset or another device, do not insert the card directly without the required adapter.

### Precautions on memory card use

- Do not expose the memory card to moisture.
- Do not touch terminal connections with your hand or any metal object.
- Do not strike, bend, or drop the memory card.
- Do not attempt to disassemble or modify the memory card.
- Do not use or store the memory card in humid or corrosive locations or in excessive heat such as a closed car in summer, in direct sunlight or near a heater, etc.
- Do not press or bend the end of the memory card adapter with excessive force.
- Do not let dirt, dust, or foreign objects get into the insert port of any memory card adapter.
- Check you have inserted the memory card correctly.
- Insert the memory card as far as it will go into any memory card adapter needed. The memory card may not operate properly unless fully inserted.
- We recommend that you make a backup copy of important data. We are not responsible for any loss or damage to content you store on the memory card.
- Recorded data may be damaged or lost when you remove the memory card or memory card adapter, turn off the power while formatting, reading or writing data, or use the memory card in locations subject to static electricity or high electrical field emissions.

### Protection of personal information

Erase personal data before disposing of the product. To delete data, perform a master reset. Deleting data from the phone memory does not ensure that it cannot be recovered. KDDI/Sony Ericsson does not warrant against recovery of information and does not assume responsibility for disclosure of any information even after a master reset.

### Loudness warning!

Avoid volume levels that may be harmful to your hearing.

## FCC Statement for the USA

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions :



- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Any change or modification not expressly approved by Sony Ericsson may void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Industry Canada Statement

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This device complies with RSS-210 of Industry Canada.

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

## Declaration of Conformity for W64S

We, Sony Ericsson Mobile Communications AB of Nya Vattentorget SE-221 88 Lund, Sweden declare under our sole responsibility that our product


### Sony Ericsson type AAH-5880001-BV

and in combination with KDDI AC-charger 02 (0203PQA), KDDI Desktop stand (64SOPUA) and Sony Earphone (MDR-E0921LP), to which this declaration relates is in conformity with the appropriate standards EN 301 511:V9.0.2, EN 301 489-7:V1.3.1, EN 300 440-2:V1.1.2, EN 300 440-1:V1.7.1, EN 301 489-3:V1.4.1 and EN 60950-1:2006, following the provisions of Radio Equipment and Telecommunication Terminal Equipment Directive 1999/5/EC

Lund, September 2008

**C €0682**

Signature



Yoshiro Kido, Head of Product Business Group Japan

We fulfill the requirements of the R&TTE Directive (1999/5/EC)



# MEMO

# Index

## A

accessories .....	10
au IC-Card .....	11
au Media Tuner .....	80
initial settings.....	82
au one Top.....	70

## B

battery pack .....	10
battery power, remaining .....	4
before use .....	10
Bookmark	
saving.....	72
viewing .....	72

## C

C-mail.....	60
C-mail Safety Block.....	60
creating and sending.....	61
icon.....	63
opening .....	62, 63
receiving.....	62
camera .....	64
photo .....	66
successful taking.....	65
cellphone etiquette.....	1
charge indicator.....	12
charging the battery pack.....	12
confirming your call costs.....	73
confirming your cellphone number	
.....	23
cross controller™ .....	15

## D

desktop holder.....	12
Dialed calls.....	30
Disaster Message Board Service	
(demonstration).....	7
display .....	17
domain.....	24
downloading Chaku-Uta-Full®	
(full songs).....	74

## downloading Chaku-Uta®

(ringtones) .....	74
drive mode .....	5

## E

e-mail .....	50
attaching photo.....	69
creating and sending.....	51
icons .....	51, 54, 55
initial settings.....	23
opening .....	54, 55
receiving.....	54
replying.....	57
searching.....	56
viewing attached photo/movie .....	58

## e-mail address

changing.....	24
confirming .....	23

## English display .....

## EZ Navi .....

## EZ News Flash .....

## EZ Service menu.....

## EZweb.....

Bookmark .....	72
confirming your call costs.....	73
initial settings.....	23

## I

## icons .....

## idle screen.....

## ID Unsent.....

## incoming indicator .....

## initial settings .....

## international call .....

## Internet (See "EZweb")

## M

## mail

C-mail.....	60
e-mail .....	50

## mail filter.....

## Main menu.....

manner mode .....	4, 31
Media Launcher .....	21
Media style .....	22

## N

names of parts .....	11
Normal style .....	22

## O

one-ring call .....	6
overseas use .....	26

## P

<b>Pair Function</b> .....	<b>48</b>
making a call .....	49
saving .....	48
<b>phone book</b> .....	<b>42</b>
deleting .....	45
editing .....	44
making a call .....	46
saving .....	42
saving from dialed/received calls .....	47
<b>Phone call</b> .....	<b>27</b>
if you are unable to answer .....	29
making .....	27
making an international call .....	27
notify/not notify the other party .....	27
receiving .....	29

## photo

attaching to e-mail .....	69
saving .....	67
taking .....	66
viewing .....	68

<b>power</b> .....	<b>4</b>
--------------------	----------

## R

<b>Received calls</b> .....	<b>30</b>
<b>reception strength</b> .....	<b>4</b>
<b>record message</b> .....	<b>4, 34</b>
playing back .....	35
<b>Recording oneself style</b> .....	<b>22</b>
<b>redialing</b> .....	<b>30</b>
<b>Remote Ctrl Lock</b> .....	<b>86</b>
<b>ringtone</b> .....	<b>32</b>

## S

<b>Safety Buzzer</b> .....	<b>88</b>
<b>Security Lock Service</b> .....	<b>87</b>
<b>soft key</b> .....	<b>16</b>
<b>spam</b> .....	<b>6, 59</b>
<b>stereo earphone</b> .....	<b>13</b>

## T

<b>Television (1Seg)</b> .....	<b>83</b>
<b>text input</b> .....	<b>36</b>
alphanumerics .....	37
Back Space function .....	37
changing input mode .....	36
character key assignment table .....	37
characters assigned to the same key .....	39
deleting characters .....	39
emoticons .....	40
pictorial characters .....	40
sentences .....	41
symbols .....	40
uppercase characters .....	39
<b>troubleshooting</b> .....	<b>85</b>

## V

<b>volume during a call</b> .....	<b>30</b>
-----------------------------------	-----------

## For inquiries, call:

au Customer Service Center

### From EZweb site:

#### How to access

EZ ▶ EZweb ▶ au one Top

▶ auお客さまサポート

(au Customer Support)

▶ お問い合わせ (Inquiries)

※Menu structure is subject to change without prior notice.



### ■ For general information and charges

#### From regular phones:

 **0077-7-111** (toll free)  
フリーコール

#### From au cellphones:

**157 area code not required** (toll free)

### ■ For loss, theft or damage and operation information

#### From regular phones:

 **0077-7-113** (toll free)  
フリーコール

#### From au cellphones:

**113 area code not required** (toll free)

Pressing "zero" will connect you to an operator,  
after calling "157" on your au cellphone.

## なるほど！au

(Participatory au Q&A community)

#### How to access

EZ ▶ EZweb ▶ au one Top

▶ auお客さまサポート

(au Customer Support)

▶ なるほど！au

(Participatory au Q&A community)

※Data communications fee is required.

Read this barcode (QR Code)  
to access to なるほど！au  
(Participatory au Q&A  
community)



Sales : KDDI Corporation

Okinawa Cellular Telephone Company

Manufacturer : Sony Ericsson Mobile Communications Japan, Inc.

Read this to access to  
au online manual



Cellphone and PHS operators collect and recycle unused  
telephones, batteries and battery chargers at stores bearing the  
♻️ logo regardless of brand and manufacturer to protect the  
environment and reuse valuable resources.

A-D3M-100-11(1)

September 2008, 1st Edition